 
 



BUTTONS

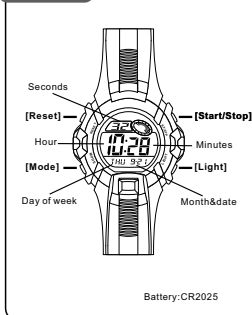



BACKLIGHT

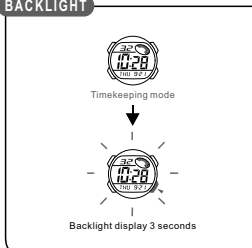

 
MODESELECTION

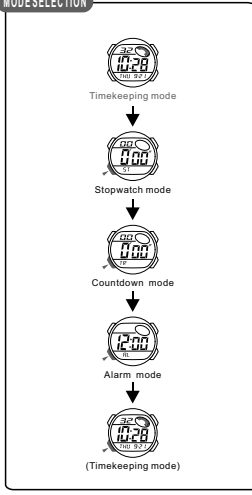


C COUNTDOWN

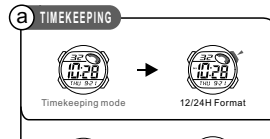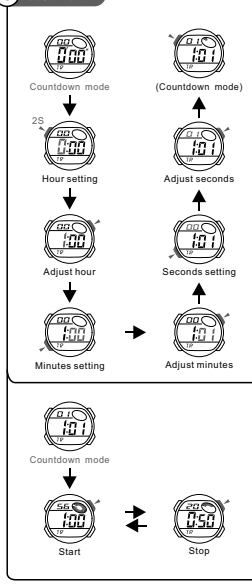  


a TIMEKEEPING

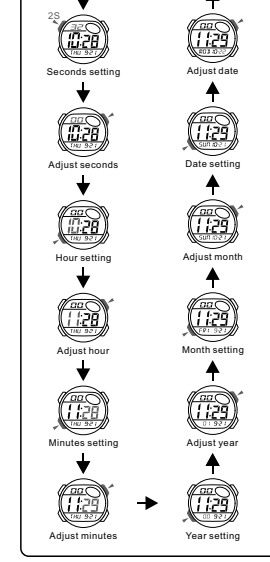 


b STOPWATCH

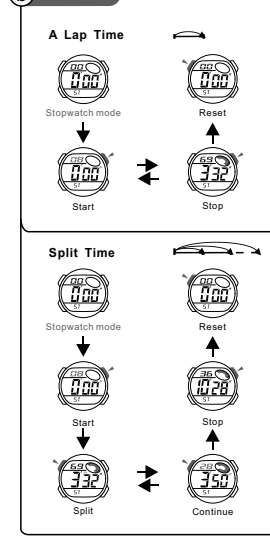 


d ALARM

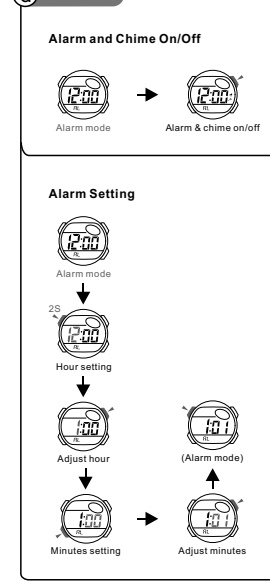 


TASTEN

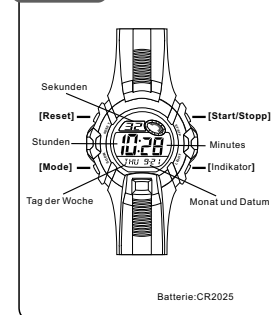 



HINTERGRUNDBELEUCHTUNG

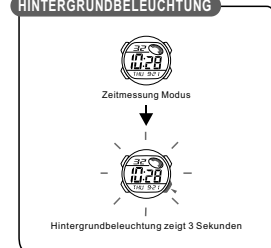 


MODE AUSWAHL

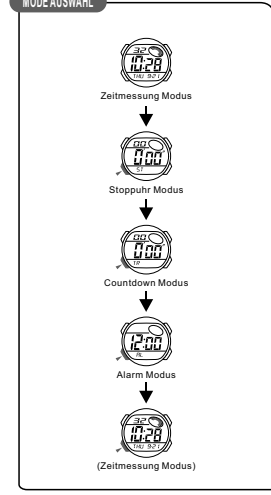 


c COUNTDOWN

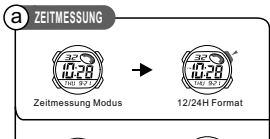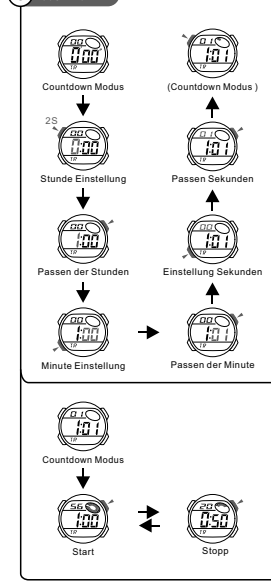  



a ZEITMESSUNG

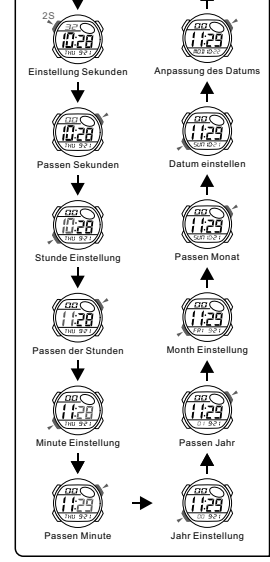 


b STOPPUHR

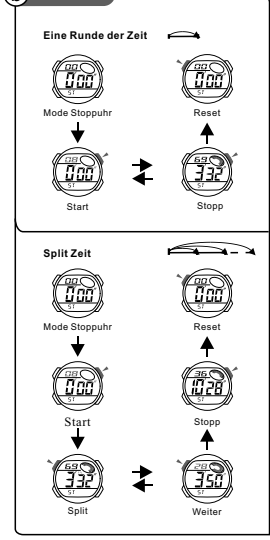 


d ALARM

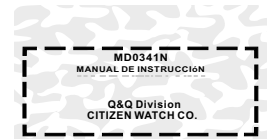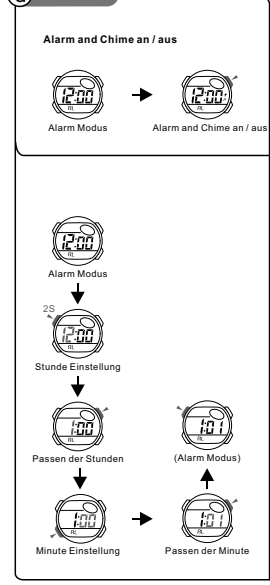  


BOTONES

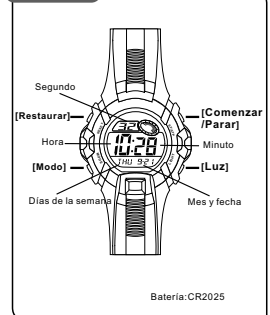 



LUZ TRASERA

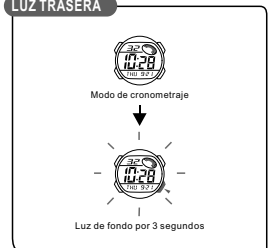 


SELECCION DE MODO

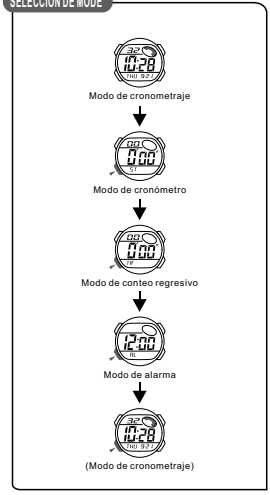 


c CONTEO REGRESIVO

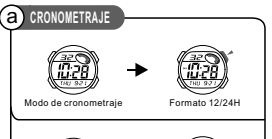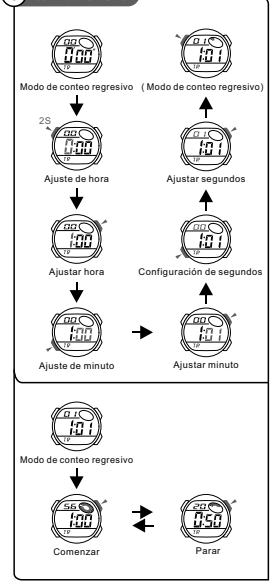  


a CRONOMETRAJE

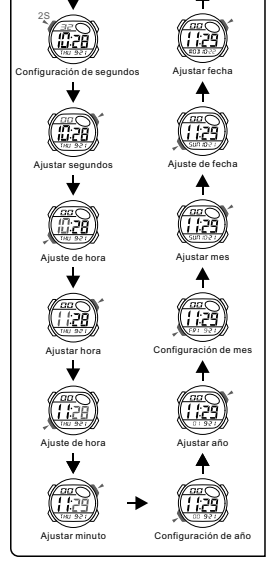 


b CRONOMETRO

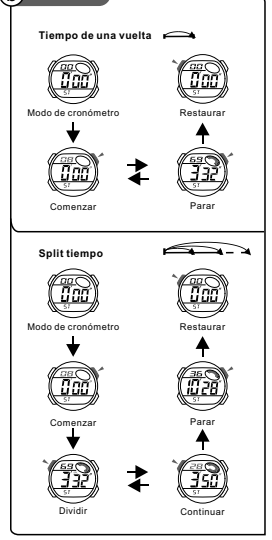 


d ALARMA

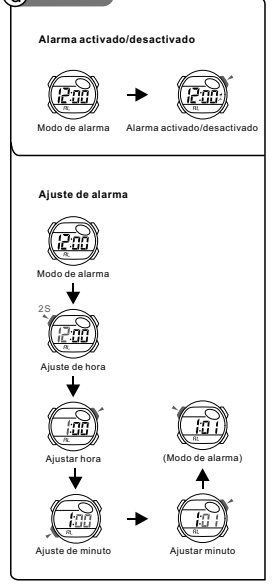 


BOTTONI

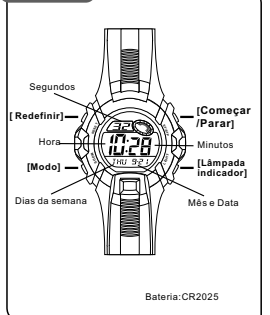 



LUZ DO FUNDO

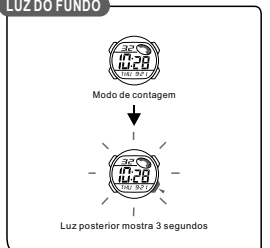 


SELEÇÃO DE MODO

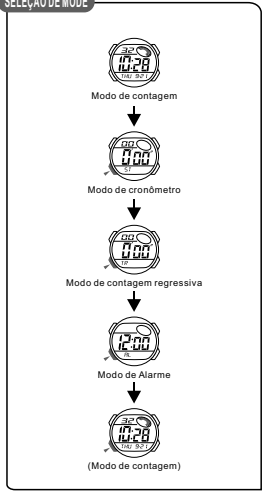 


c CONTAGEM REGRESSIVA

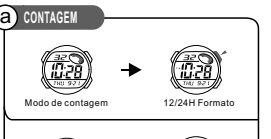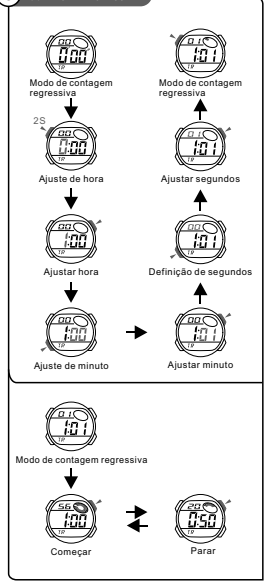  


a CONTAGEM

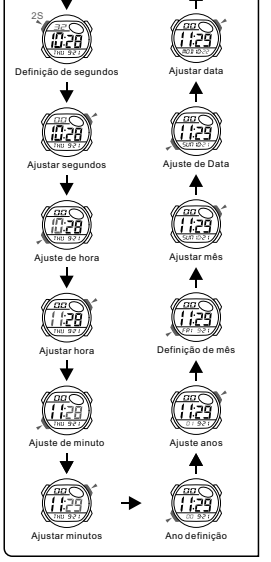 


b CRONOMETRO

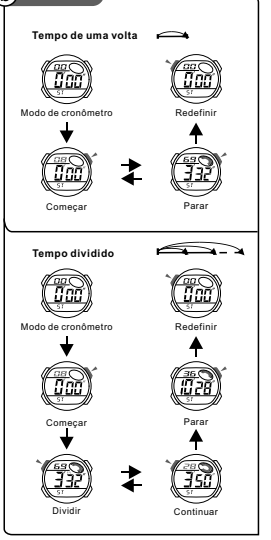 


d ALARME

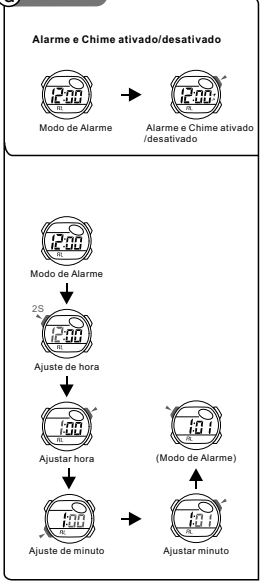 


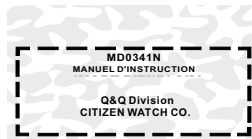 


BOUTTONS

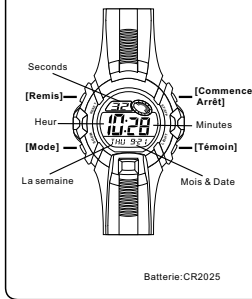 


LUMIÈRE ARRIÈRE

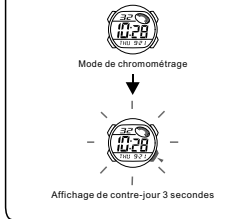 


SELECTION MODE

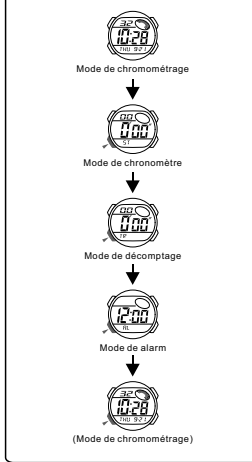 


C DÉCOMPTAGE

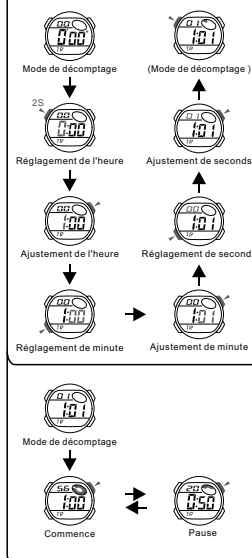 


a CHRONOMÉTRAGE

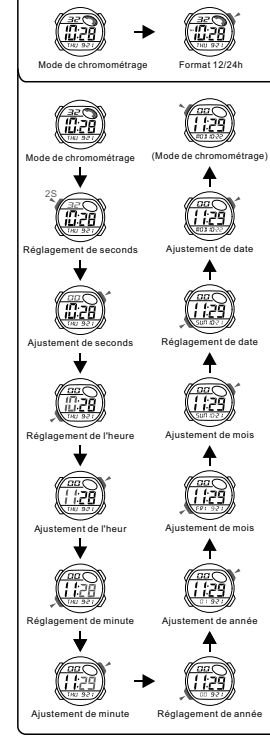 


b CHRONOMÈTRE

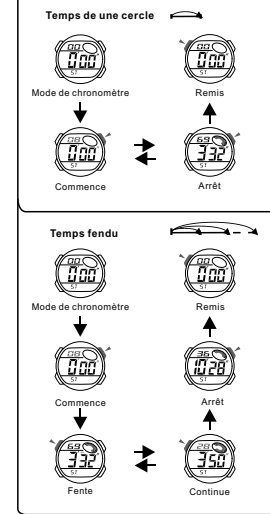 

d ALARM

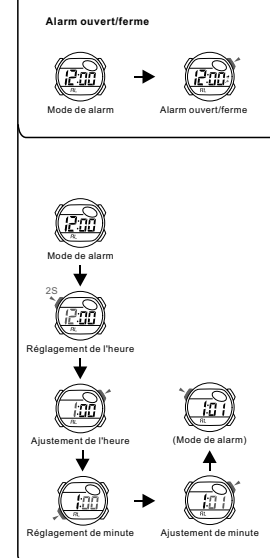 


КНОПКИ

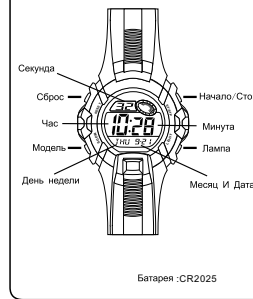 


ПОДСВЕТ



 
ВЫБОР МОДЕЛИ

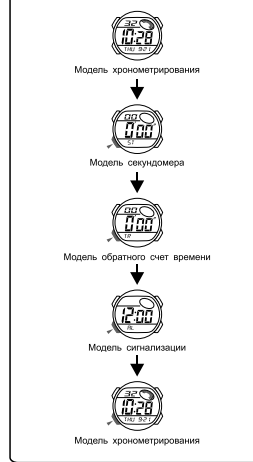


c ОБРАТНЫЙ СЧЕТ ВРЕМЕНИ

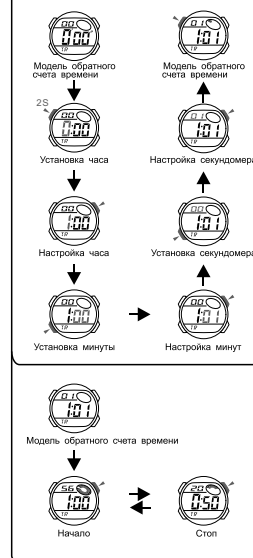 


a ХРОНОМЕТРИРОВАНИЕ

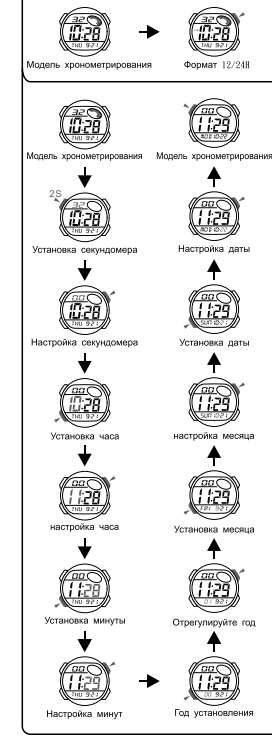 


b СЕКУНДОМЕР

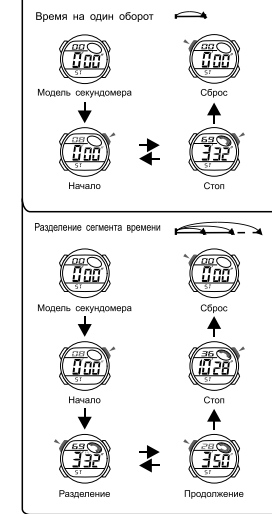 


d СИГНАЛИЗАЦИЯ

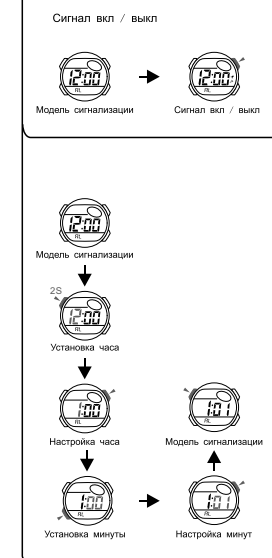 


TASTI

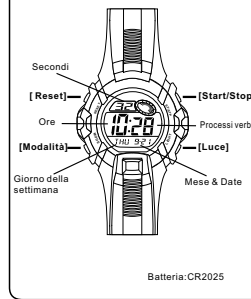 


RETROILLUMINAZIONE

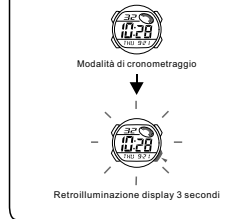 


MODALITÀ DI SELEZIONE

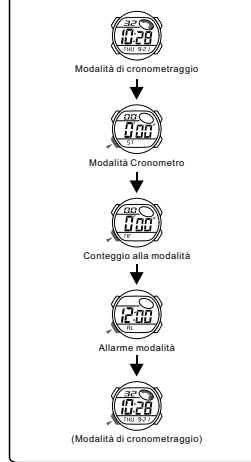 


c COUNTDOWN

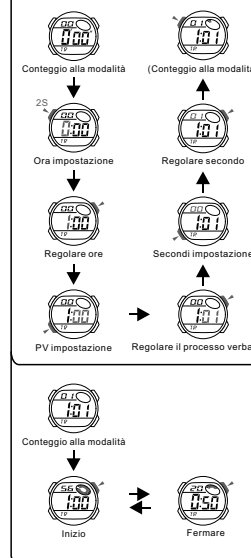 


a CRONOMETRAGGIO

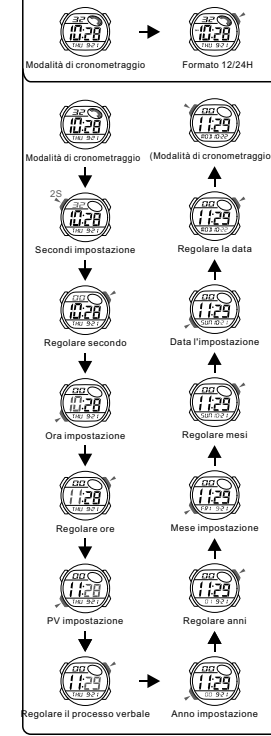 


b CRONOMETRO

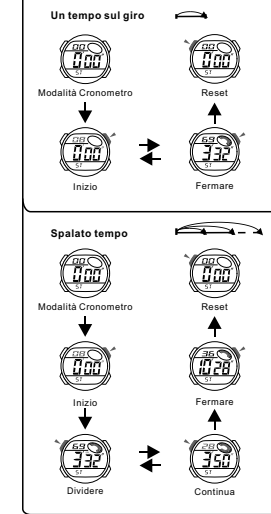 


d ALLARME

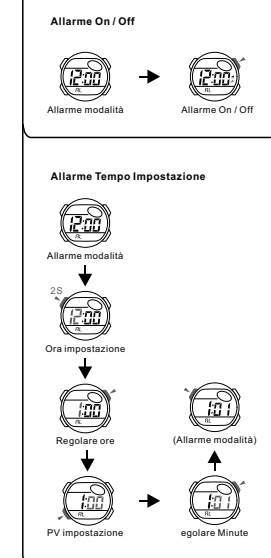 


按鍵功能

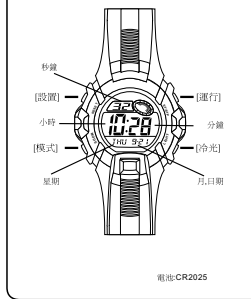 


冷光

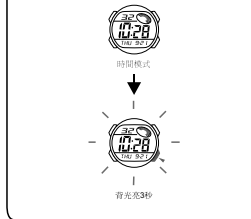 


模式選擇

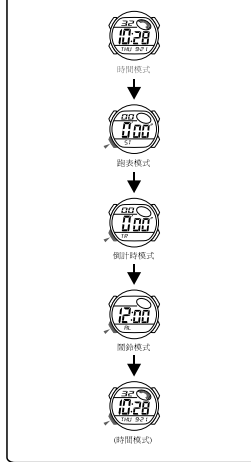 


c 倒計時

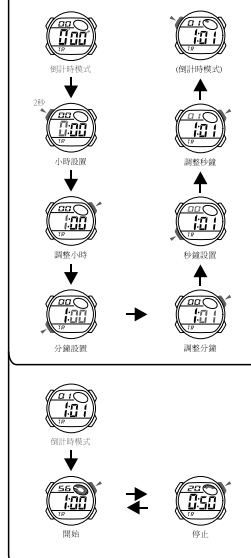 

a 時間

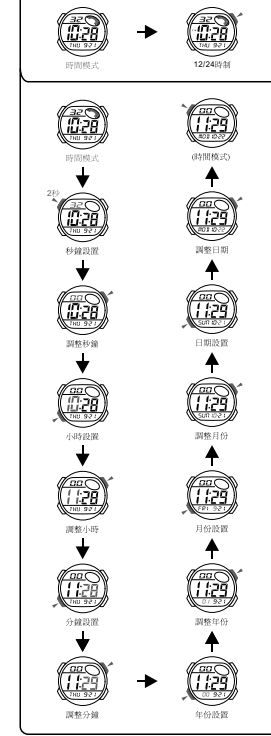 

b 跑表

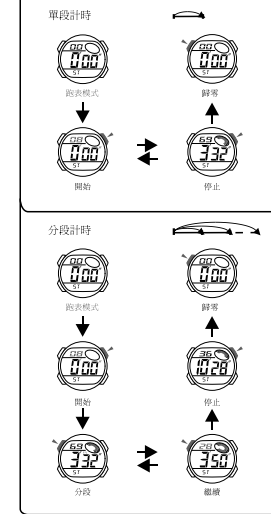 

d 鬧鈴

