 
 
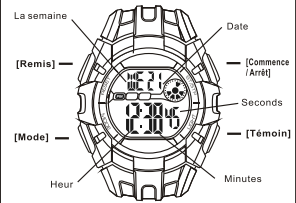 
 
 


BOUTONS



Batterie: CR2025

 
 
b Alarm




c CHRONOMETRE






d Dultemps





SELECTION MODE

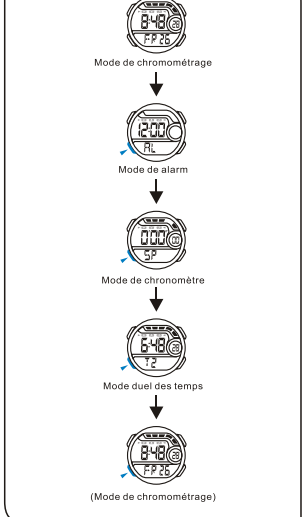 


a Chronométrage

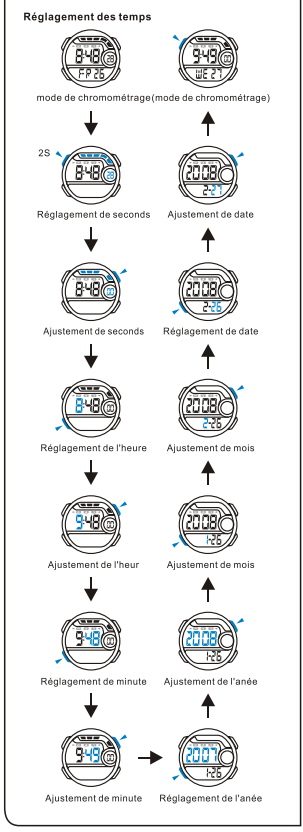   

LUMIÈRE ARRIÈRE

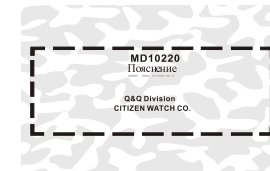  


КНОПКИ

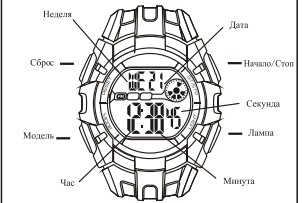 


Батарея :CR2025

 
ВЫБОР МОДЕЛИ

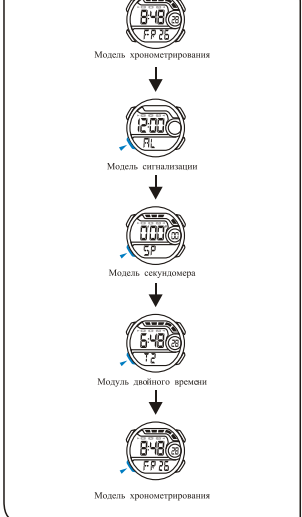


a ХРОНОМЕТРИРОВАНИЕ

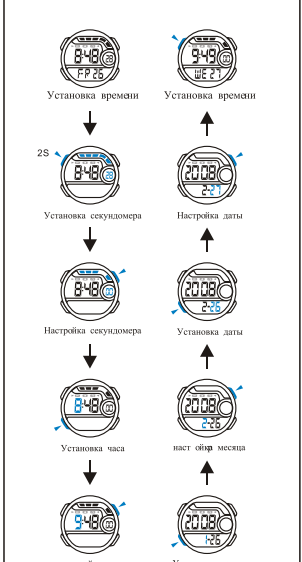 

ПОДСВЕТ

 


c СЕКУНДОМЕР

 

d ДВОЙНОЕ ВРЕМЯ




 TASTI


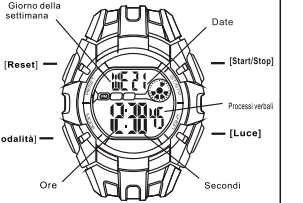


Batteria: CR2025

 MODALITÀ DI SELEZIONE

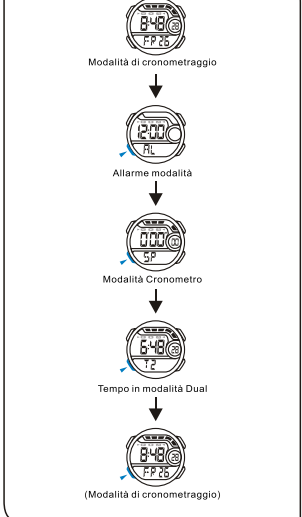


a Cronometraggio

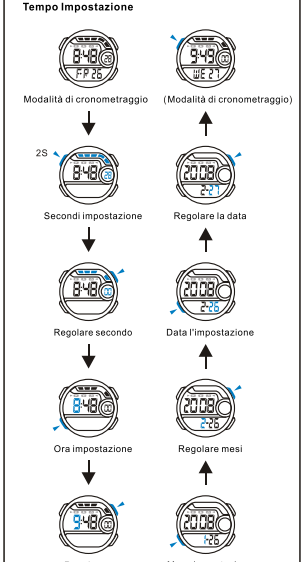  




Retrouluminazione





 
b ALLARME




c CRONOMETRO

   



d DUALTIME

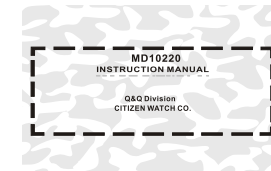   


模式選擇

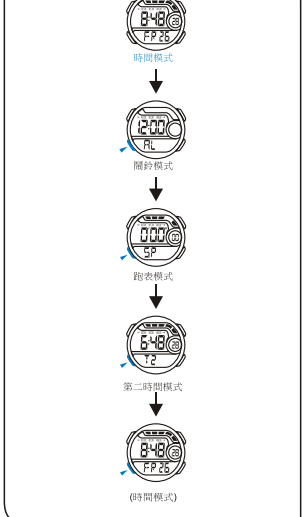 


a 時間

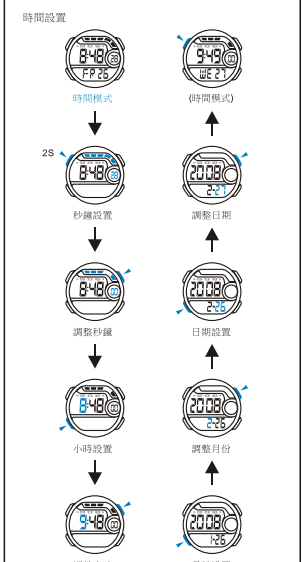  

冷光


 


按鍵功能

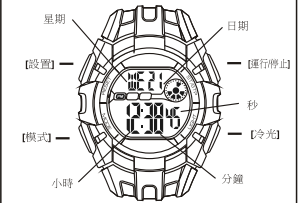 

電池:CR2025

  b 鬧鈴



c 跑表



d 第二時間

