



 
BUTTONS




UNLOCK




BACKLIGHT




MODE SELECTION

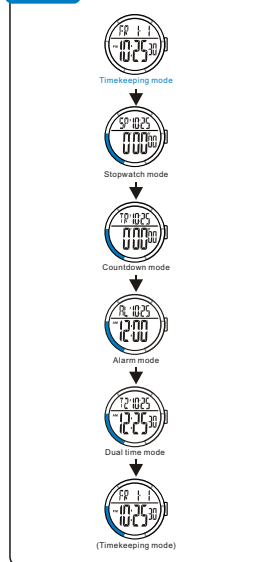

B STOPWATCH

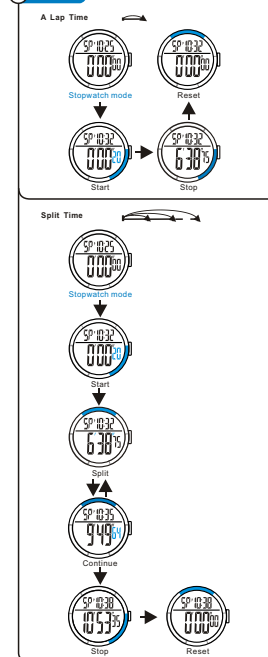

TASTEN

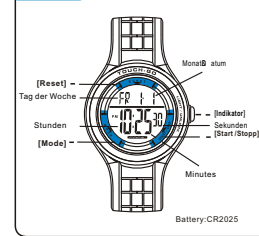


Aufschließen




HINTERGRÜNDBELEUCHTUNG



B STOPPUHR

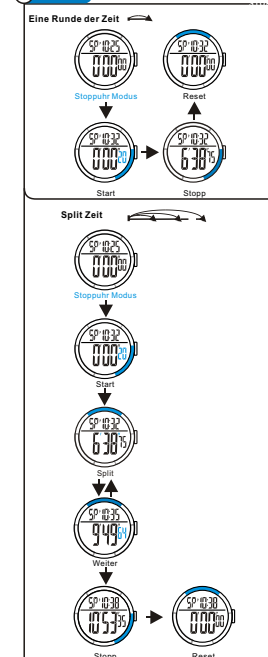

BUTTONS

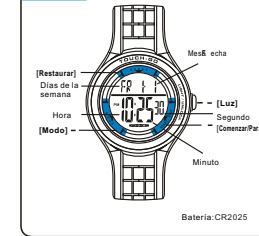


Descubrir




LUZ TRASERA



B CRONOMETRO

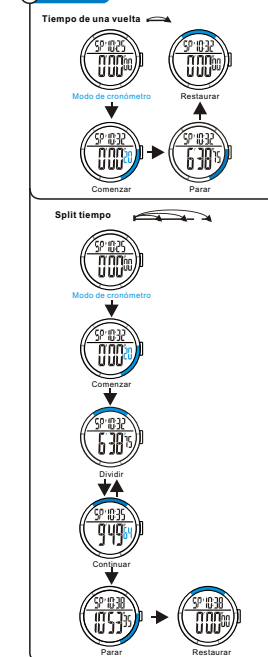

BOTOES

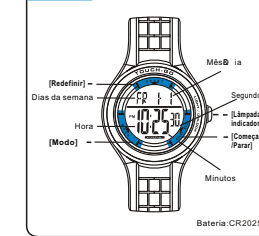


Destruar




LUZ




B CRONOMETRO

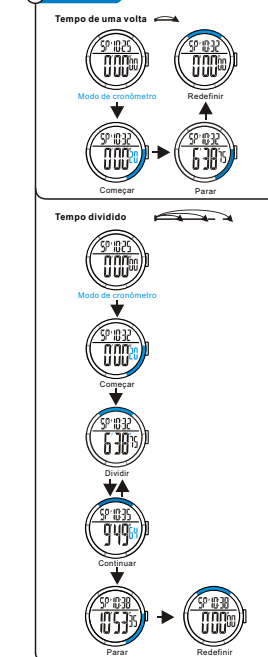


a TIMEKEEPING

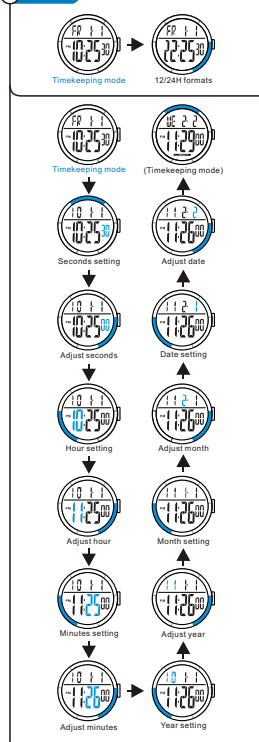


d ALARM

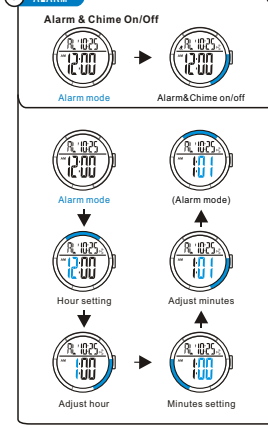


e DUAL TIME

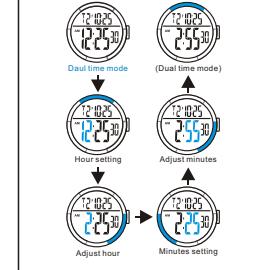


a ZEITMESSUNG

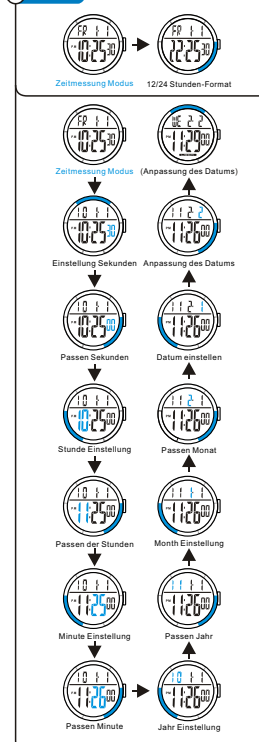


d ALARM

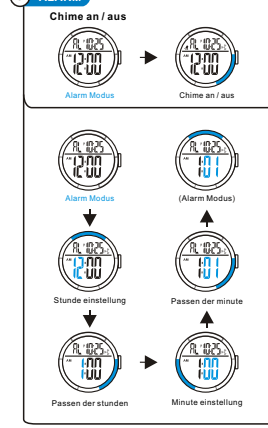


e DUAL ZEIT

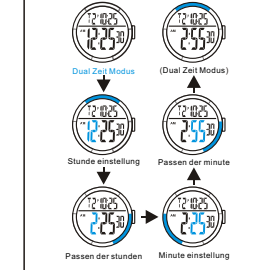


a CRONOMETRAJE

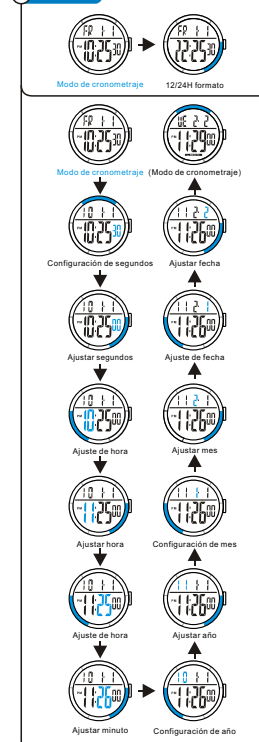


d ALARMA

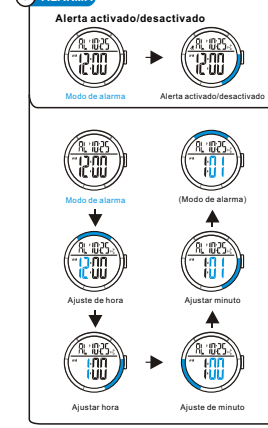


e TIEMPO DOBLE

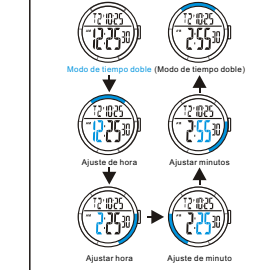

a CONTAGEM

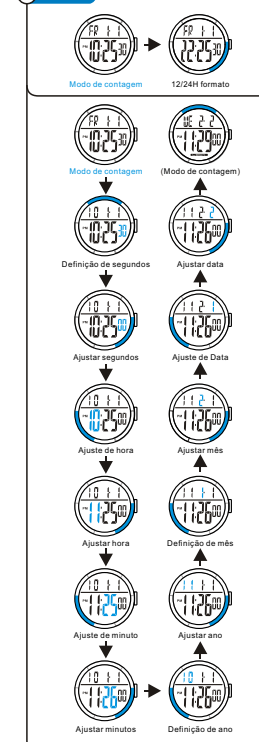

d ALARME

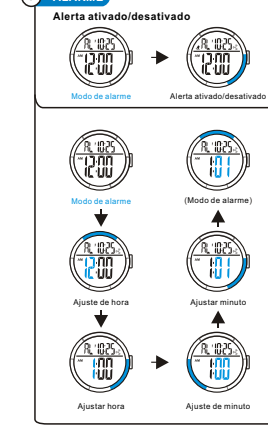

e TEMPO DUPLA

