


BUTTONS

Battery: CR2025

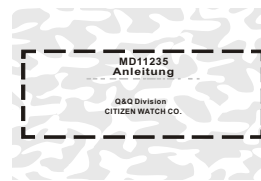


TASTEN

Batterie: CR2025



Botones

Batería: CR2025

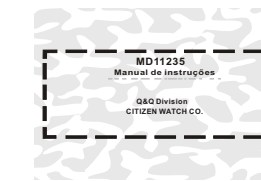

BOTÕES

Bateria: CR2025

MODE SELECTION

MODE AUSWAHL

SELECCIÓN DE MODO

SELEÇÃO DE MODO

a TIMEKEEPING

12/24H format

Display: Year, Month, Date

a Zeitmessung

12/24H Stunden System Einstellungen

Jahr, Monat, Datum anzeigen

a Cronometraje

Configuración de 12/24H

Display año, mes, fecha

a Contagem

Definição de 12/24H

Exibir ano, mês, data

b ALARME

Alerta ativado/desativado

b ALARM

Alarm & Chime On/Off

Alarm Time Setting

b Alarm

Alarm & Chime an / aus

Alarm Time Setting

b ALARMA

Alerta ativado/desativado

c STOPWATCH

A Lap Time

Split Time

c Stoppuhr

Eine Runde der Zeit

Split Zeit

c Cronómetro

Tiempo de una vuelta

Split Time

c CRONÓMETRO

Tempo de uma volta

Tempo dividido

d TIEMPO DOBLE

Modo de tiempo doble

d DUAL TIME

Dual time mode

d Dual Zeit

Dual Zeit mode

d TIEMPO DOBLE

Modo de tiempo doble

d TEMPO DUPLIO

Modo de tempo duplo

BACKLIGHT

Hintergrundbeleuchtung

LUZ TRASERA

LUZ DO FUNDO

