 





BUTTONS

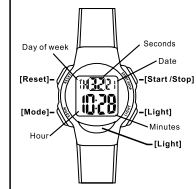


Bateria: CR2016

 
BACKLIGHT

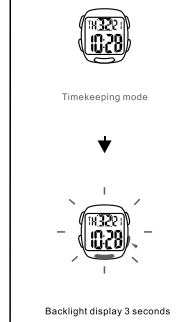


MODE SELECTION

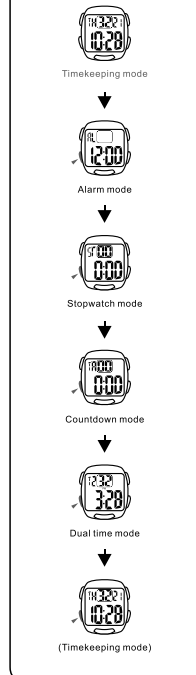 


a TIMEKEEPING

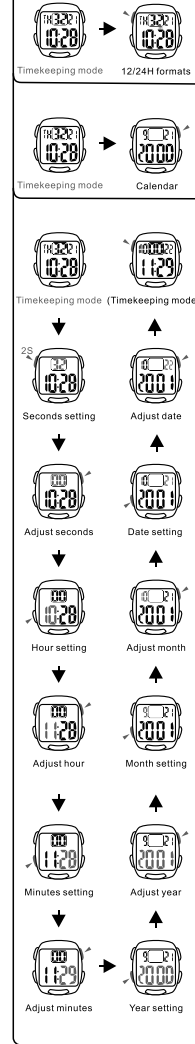 


b ALARM

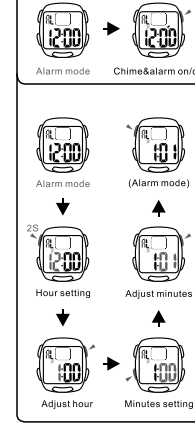 

c STOPWATCH

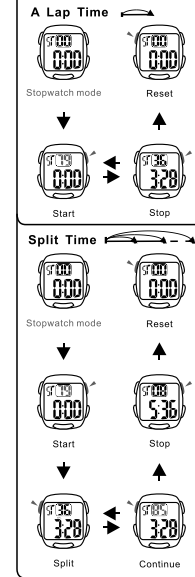 


TASTEN

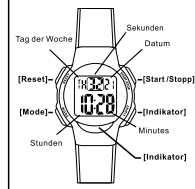 


Batterie: CR2016

 
HINTERGRUNDBELEUCHTUNG

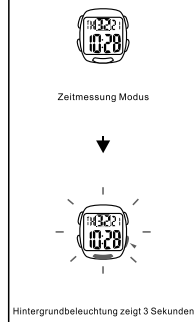


MODE AUSWAHL

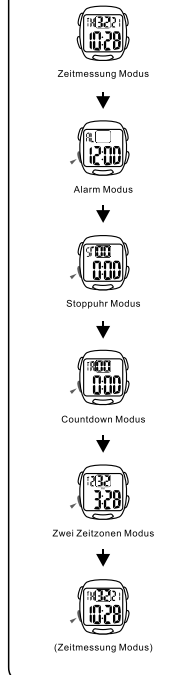 



a ZEITMESSUNG

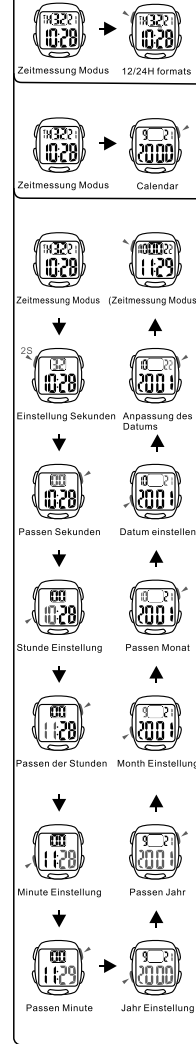 


b ALARM

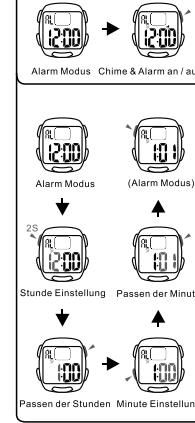 

c STOPPUHR

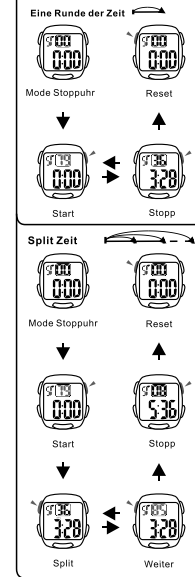  


BOTONES

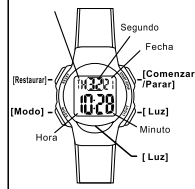 


Bateria: CR2016

 
LUZ TRASERA

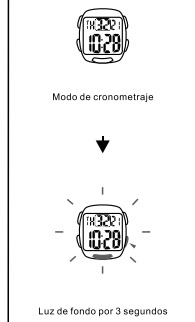


SELECCION DE MODO

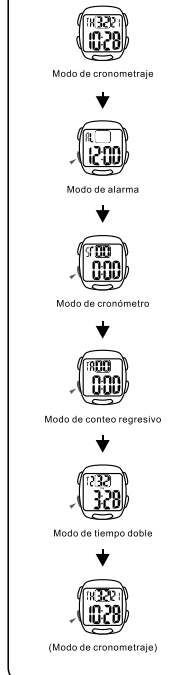 



a CRONOMETRAJE

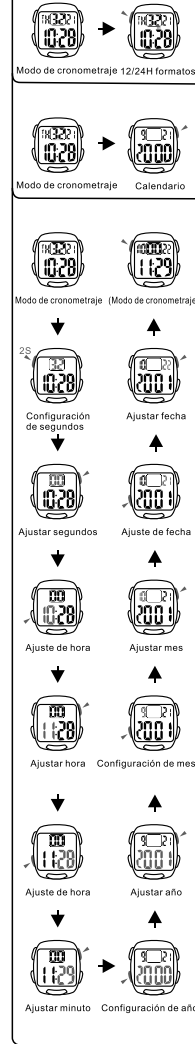 

b ALARMA

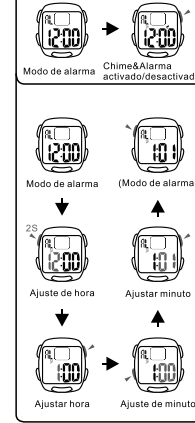 

c CRONÓMETRO

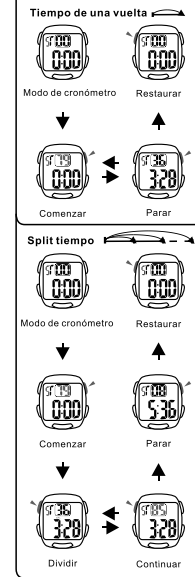  

BOTÕES

 


Bateria: CR2016


LUZ DO FUNDO




SELEÇÃO DE MODO

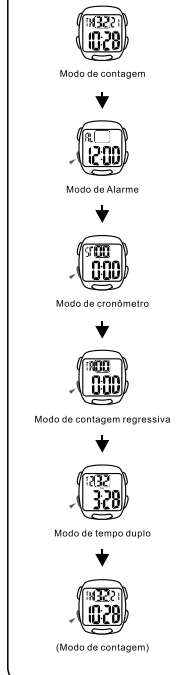


a CONTAGEM

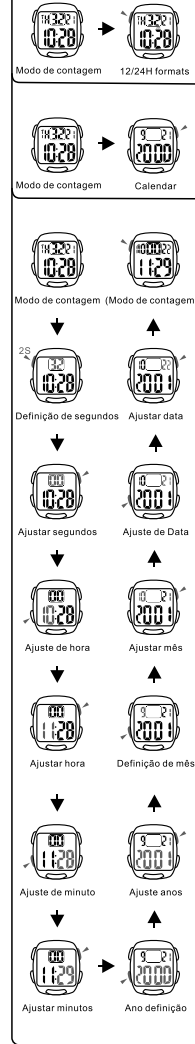 

b ALARME

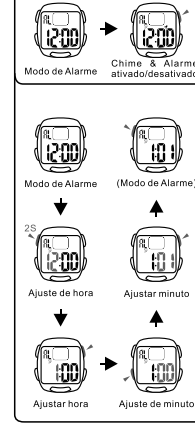 


c CRONÔMETRO

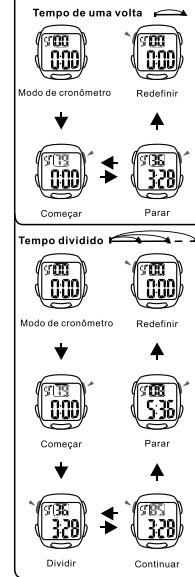 


MODELLI
MANUEL D'INSTRUCTION
O&O Division
CITIZEN WATCH CO.

 
BOUTONS

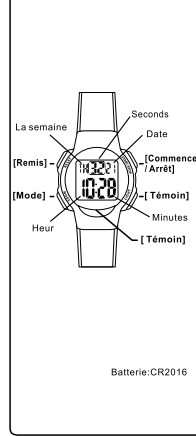


LUMIÈRE ARRIÈRE

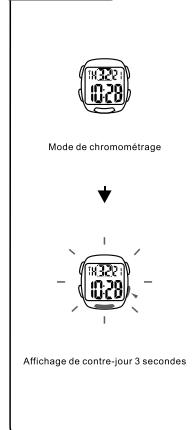 


SÉLECTION MODE

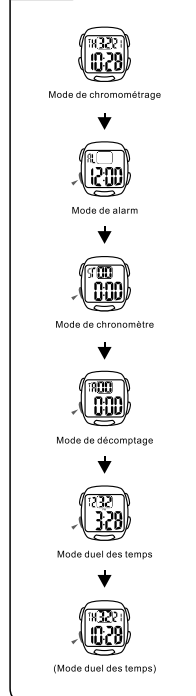 

a CHRONOMÉTRAGE

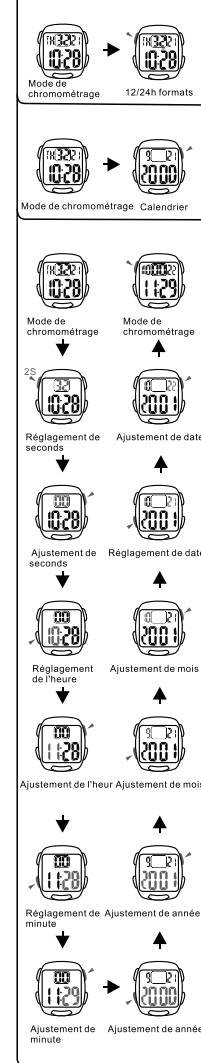 


b ALARM

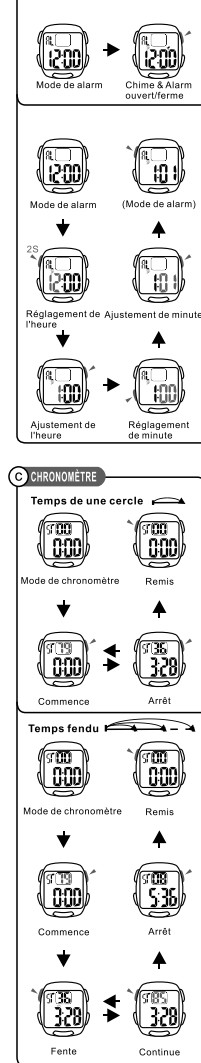 

MODELLI
ПОСЛОВОК
O&O Division
CITIZEN WATCH CO.

 КНОПКИ

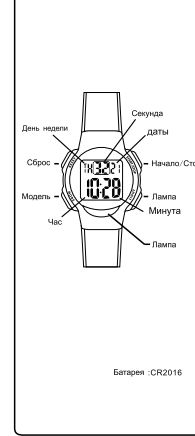

ПОДСВЕТ



a ХРОНОМЕТРИРОВАНИЕ

 


b СИГНАЛИЗАЦИЯ




MODELLI
MANUALE DISTRUZIONI
O&O Division
CITIZEN WATCH CO.


TASTI

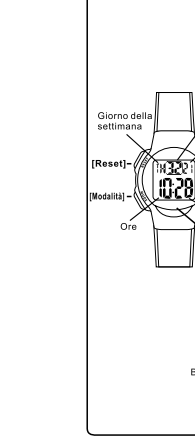


RETROILLUMINAZIONE

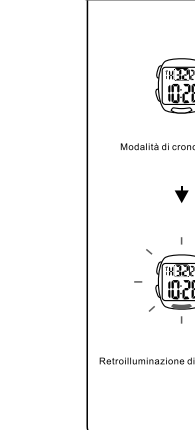 

a CRONOMETRAGGIO

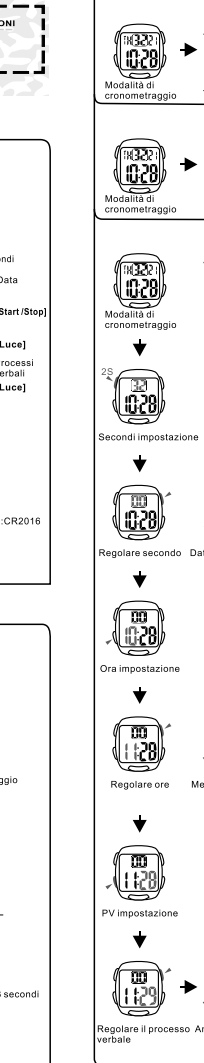 


b ALLARME

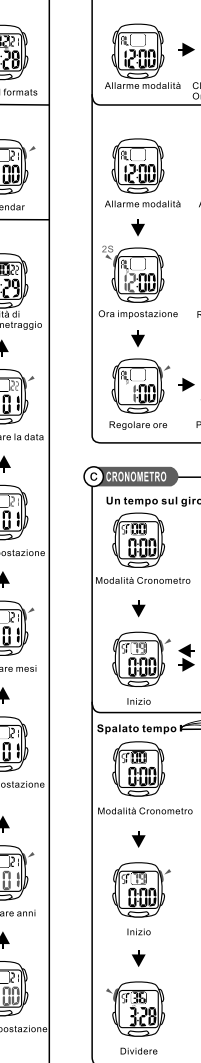 


MODELLI
説明書
O&O Division
CITIZEN WATCH CO.

 
按键功能

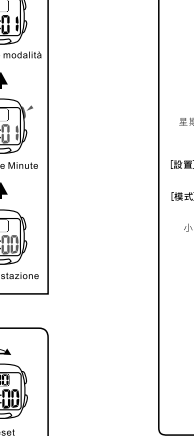


冷光

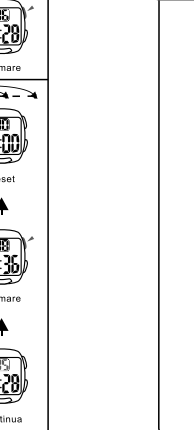 


a 時間

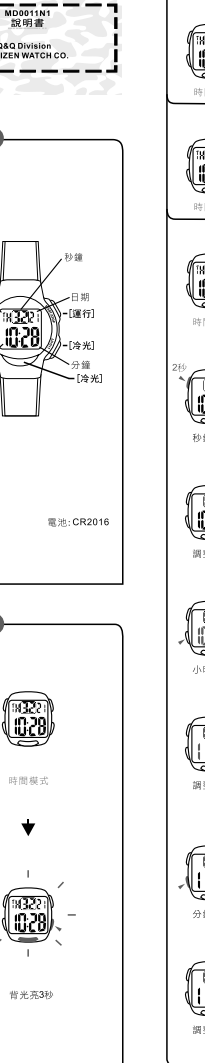 


b 鬧鈴

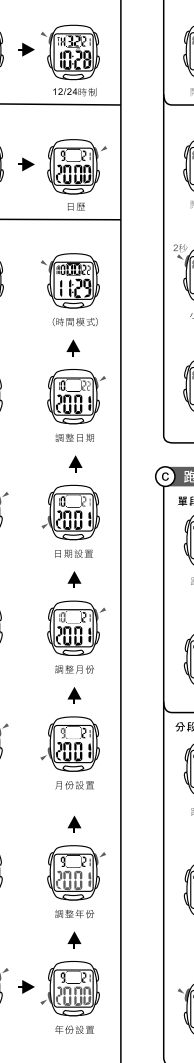 


c 跑表

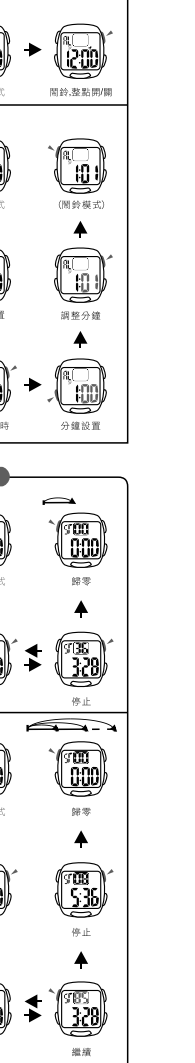 

d DÉCOMPTAGE

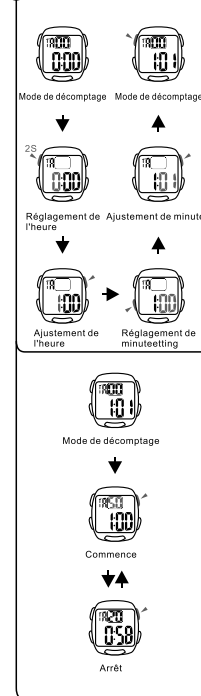 

e DUELTEMPS

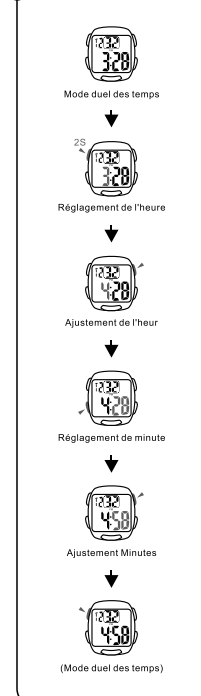 

ВЫБОР МОДЕЛИ



 
г ОБРАТНЫЙ СЧЕТ ВРЕМЕНИ




б ДВОЙНОЕ ВРЕМЯ




MODALITÀ DI SELEZIONE

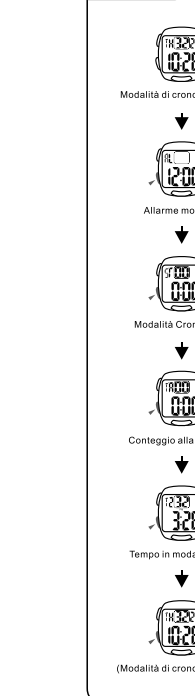


d COUNTDOWN

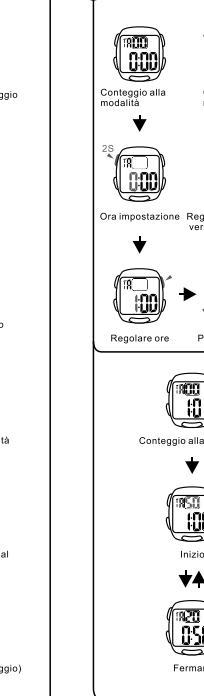 


e DUALTIME

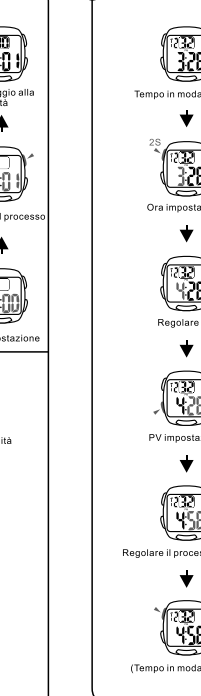 

模式選擇

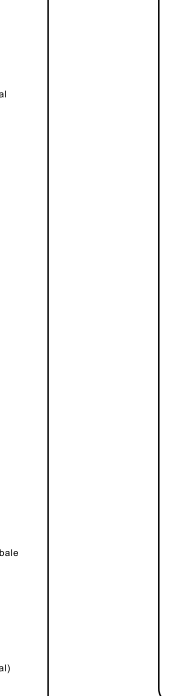 

倒計時

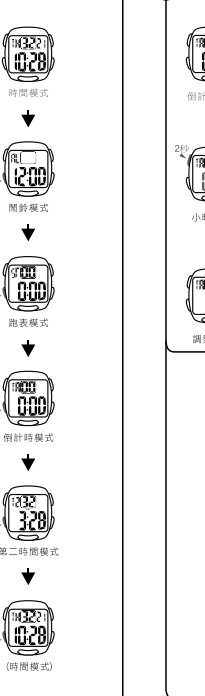 

第二時間

