





BUTTONS

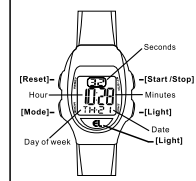


Battery: CR2016


BACKLIGHT

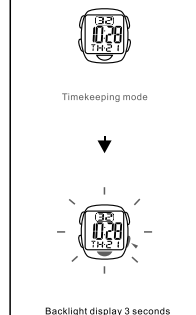


MODE SELECTION

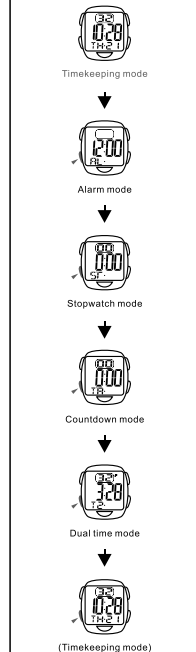


a TIMEKEEPING

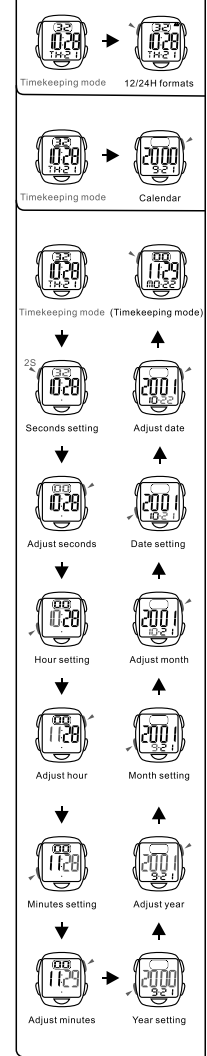


b ALARM

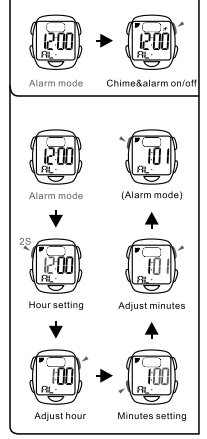

c STOPWATCH

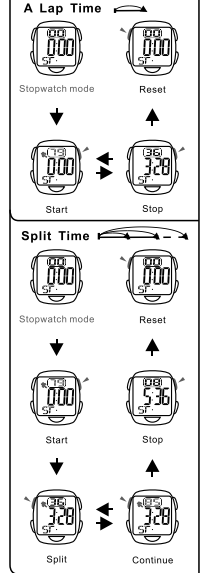


TASTEN

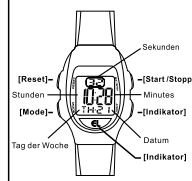


Batterie: CR2016


HINTERGRUNDBELEUCHTUNG

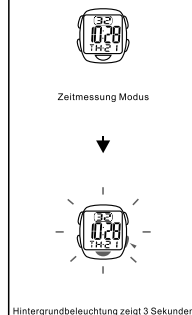


MODE AUSWAHL

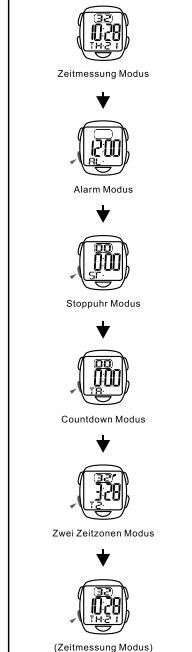



a ZEITMESSUNG

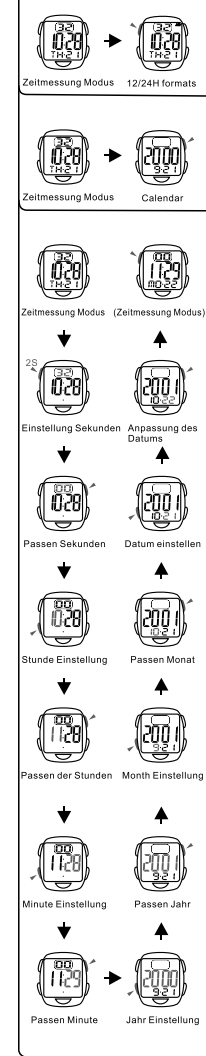


b ALARM

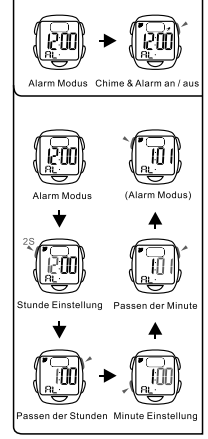

c STOPPUHR

 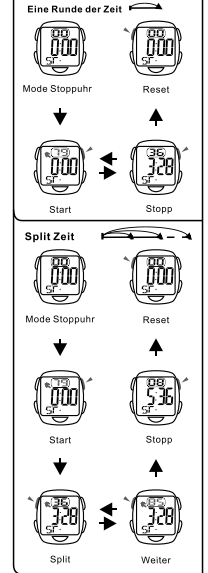


BOTONES

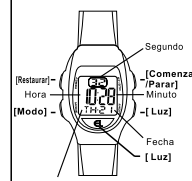


Bateria: CR2016


LUZ TRASERA

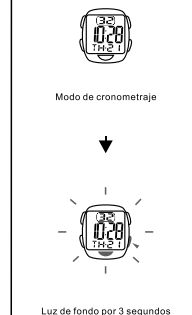


SELECCION DE MODO

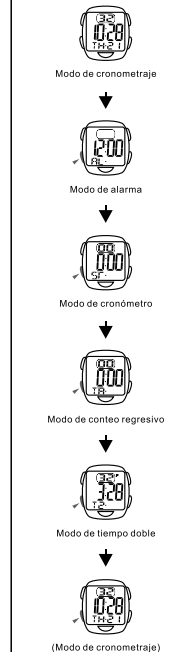



a CRONOMETRAJE

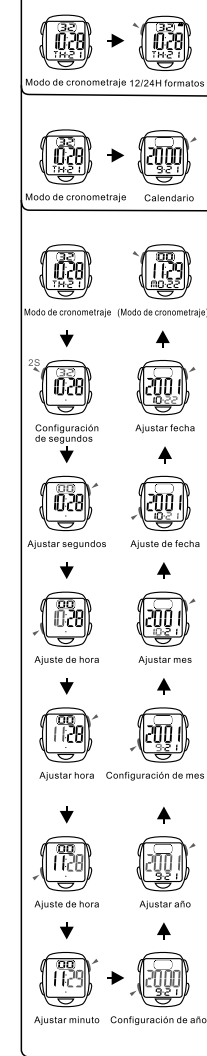


b ALARMA

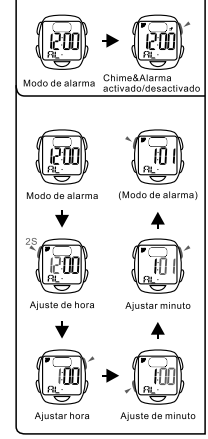

c CRONOMETRO

 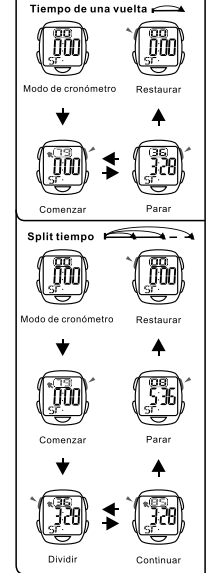


BOTÕES

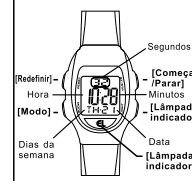


Bateria: CR2016

LUZ DO FUNDO

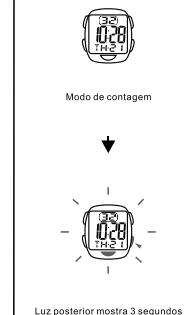


SELEÇÃO DE MODO

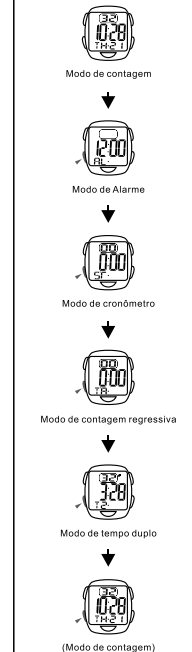

a CONTAGEM



b ALARME

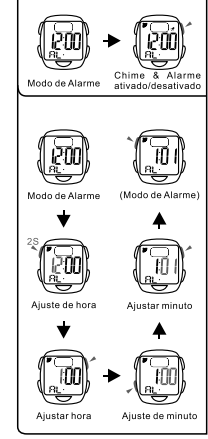

c CRONÔMETRO

