 
 





BUTTONS

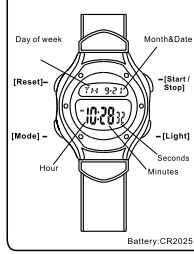


BACKLIGHT

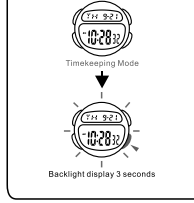

 
MODE SELECTION

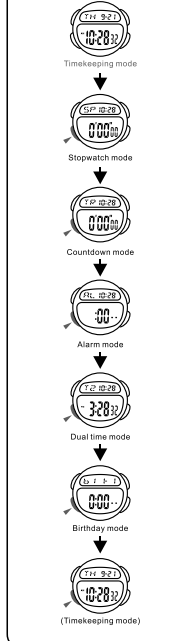


a TIMEKEEPING

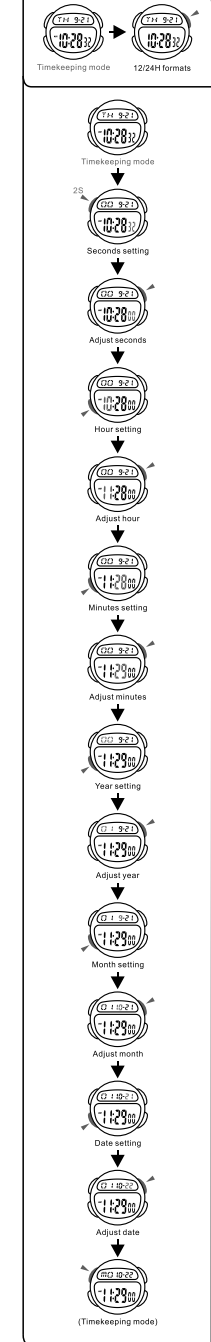 


b STOPWATCH

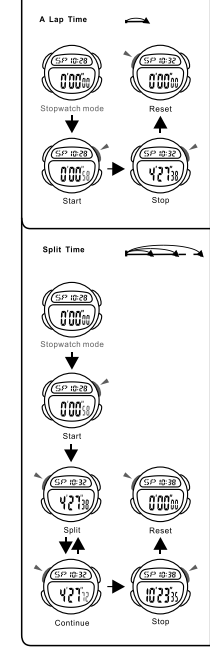 


c COUNTDOWN

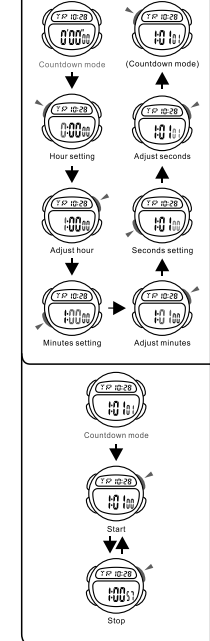 


TASTEN

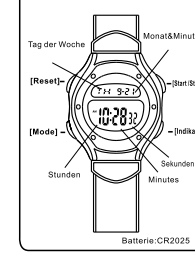 


HINTERGRUNDBELEUCHTUNG

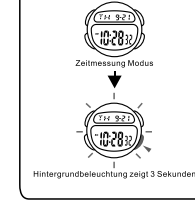 


MODE AUSWAHL

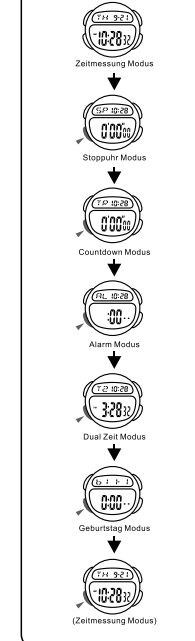 


a ZEITMESSUNG

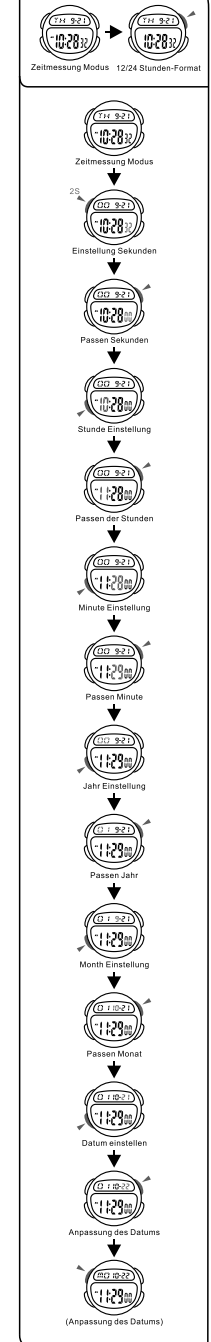 


b STOPUHR

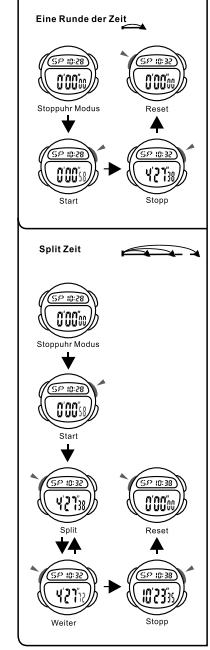 


c COUNTDOWN

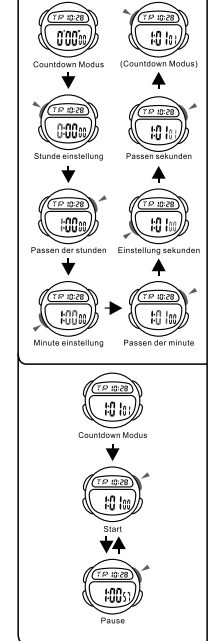 


BOTONES

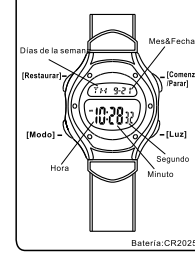 


LUZ TRASERA

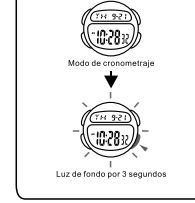 


SELECCION DE MODO

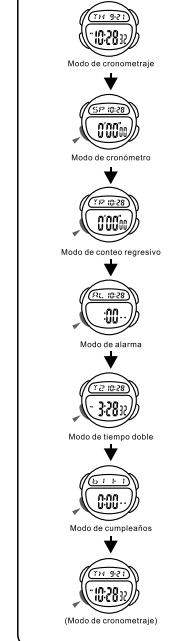 


a CRONOMETRAJE

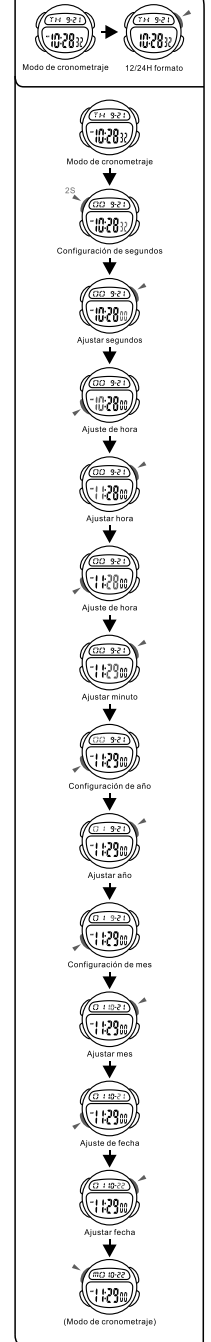 


b CRONÓMETRO

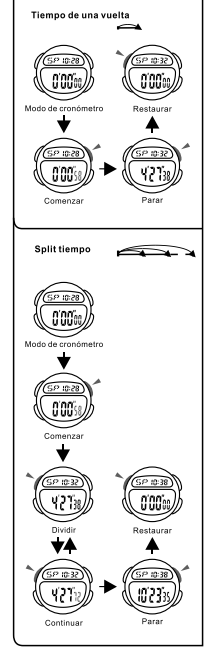 


c CONTEO REGRESIVO

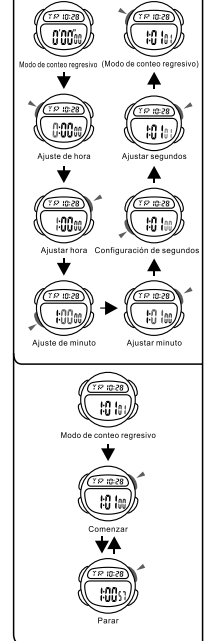 


BOTÕES

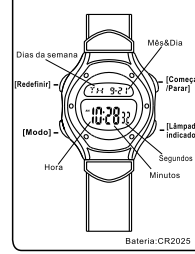 


LUZ

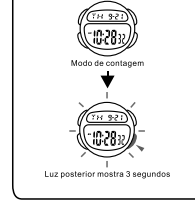 


SELECCION DE MODO

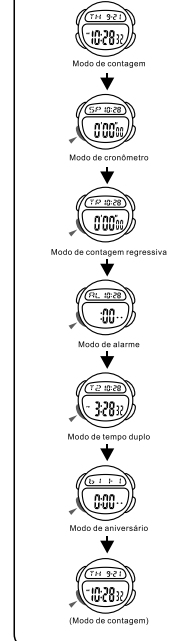 


a CONTAGEM

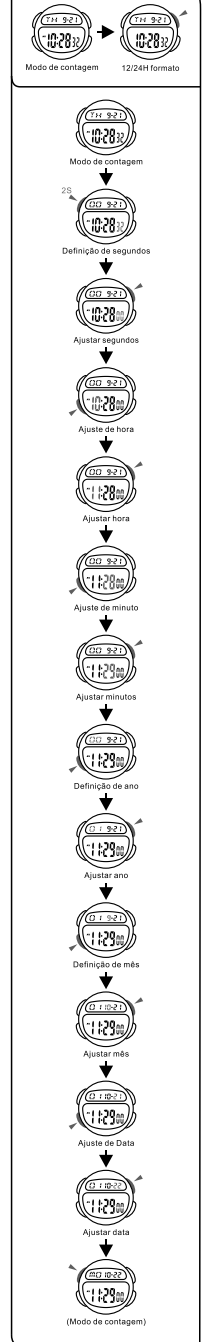 


b CRONÓMETRO

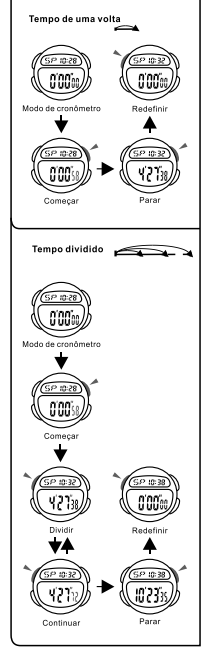 


c CONTAGEM REGRESSIVA

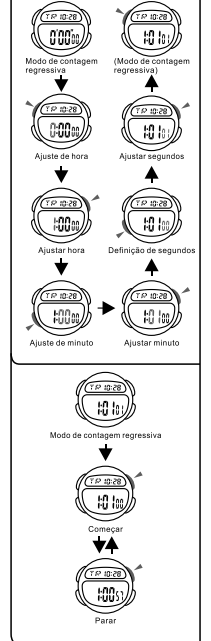 


d ALARM

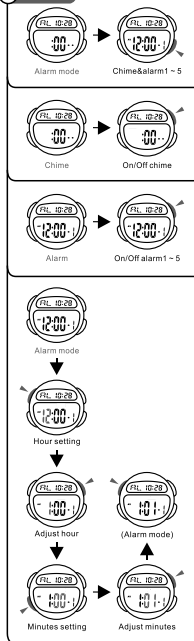 


e DUAL TIME

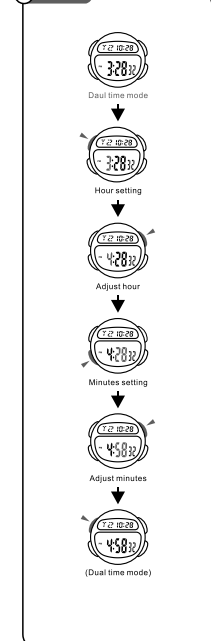 


f BIRTHDAY

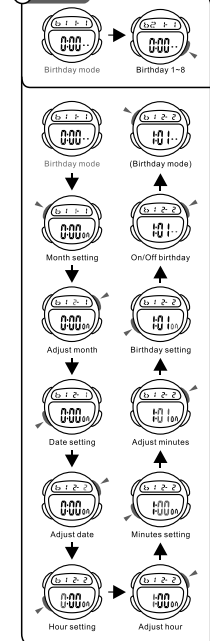 


d ALARME

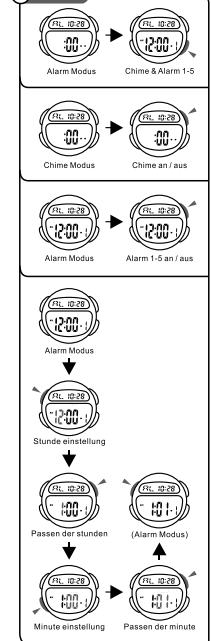 


e DUALZEIT

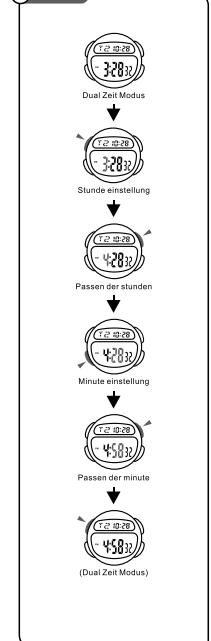 


f GEBURTSTAG

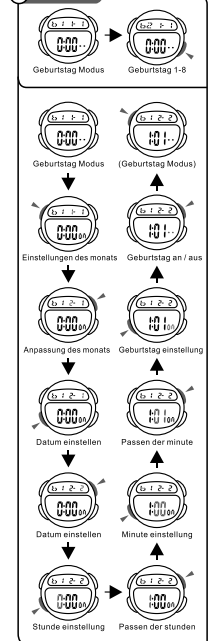 


d ALARMA

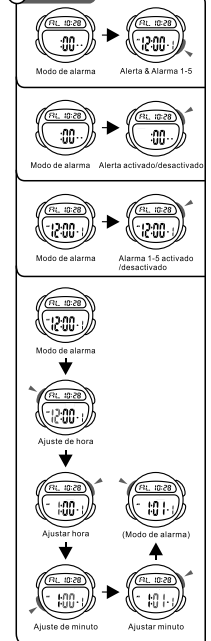 


e TIEMPO DOBLE

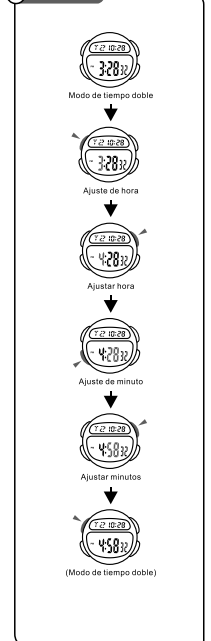 


f CUMPLEAÑOS

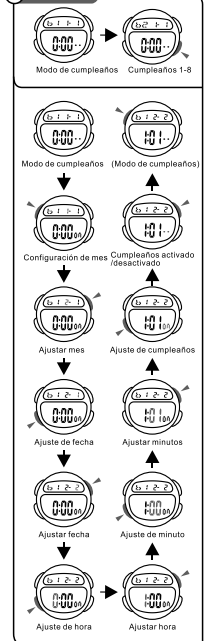 

d ALARME

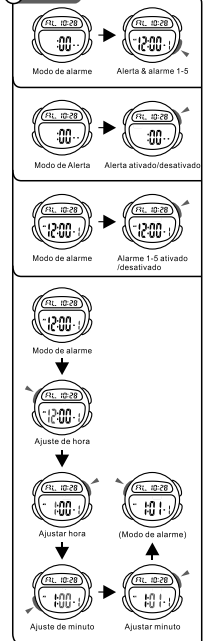 

e TEMPO DUPLIO

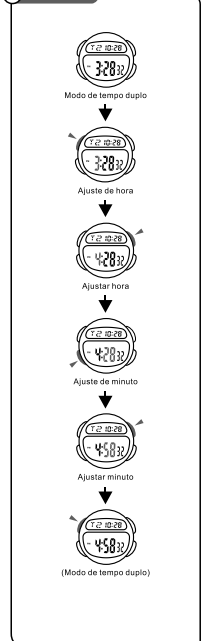 

f ANIVERSÁRIO



