 
 





BUTTONS

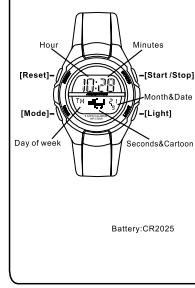


BACKLIGHT

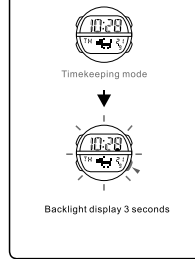

 
a TIMEKEEPING

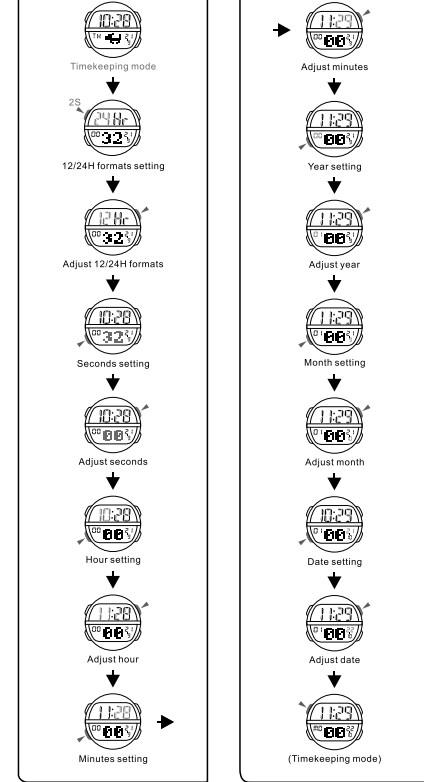


TASTEN

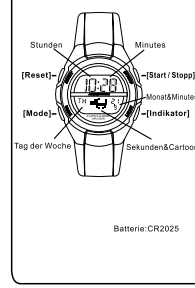 


HINTERGRUNDBELEUCHTUNG

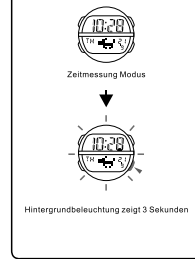 


a ZEITMESSUNG

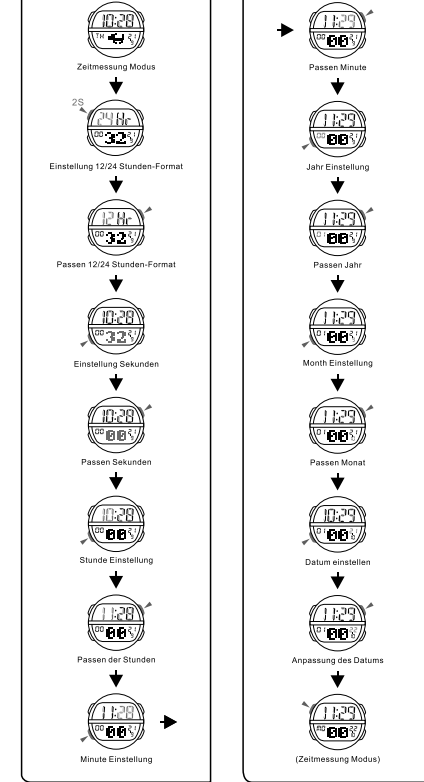 


BOTONES

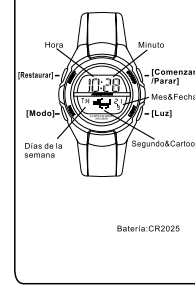 


LUZ TRASERA

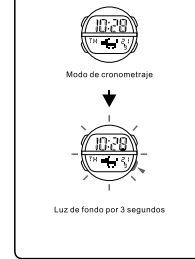 


a CRONOMETRAJE

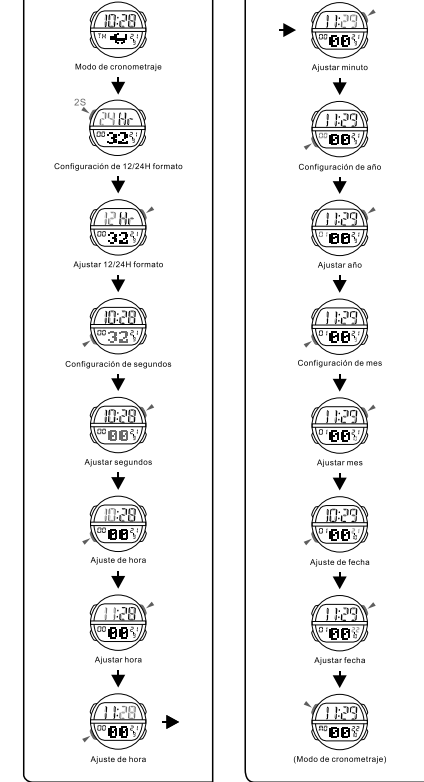 


BOTÕES

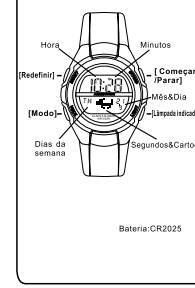 


LUZ

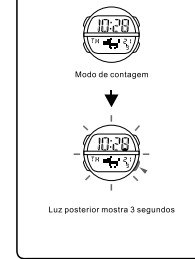 


a CONTAGEM

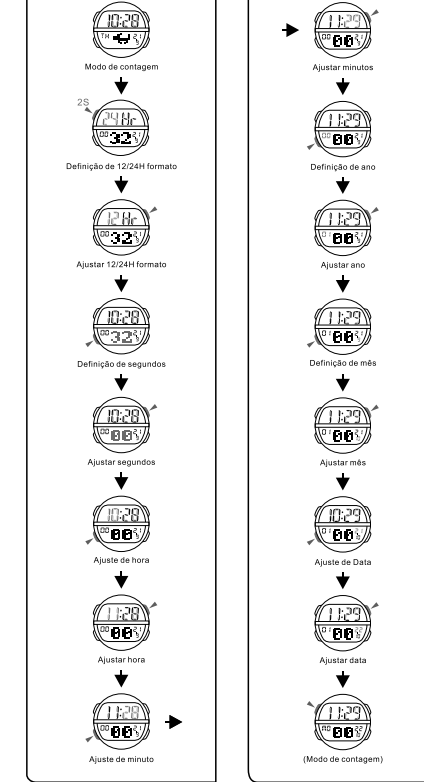 


MODE SELECTION

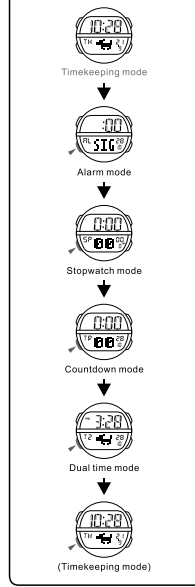 


b ALARM

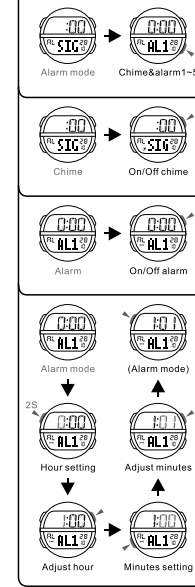 


c STOPWATCH

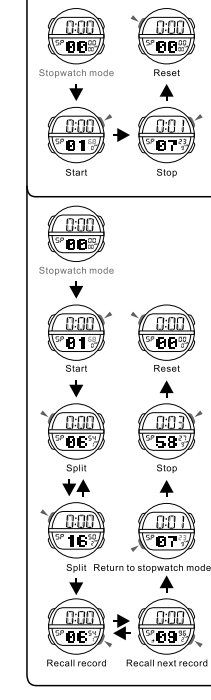 


MODE AUSWAHL

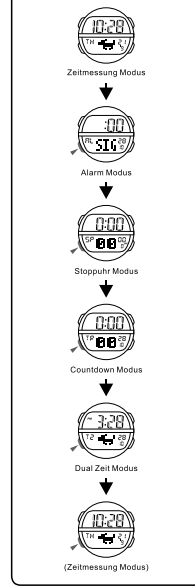 


b ALARM

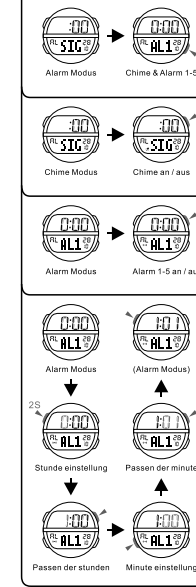 


c STOPPUHR

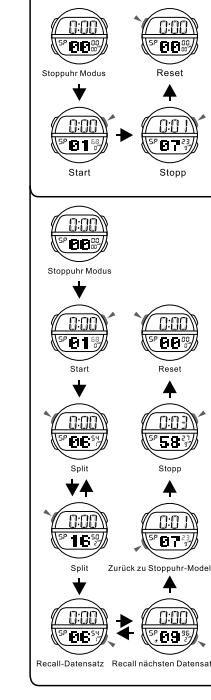 


SELECCIÓN DE MODO

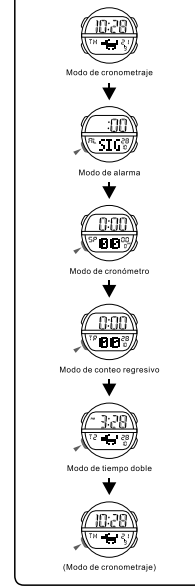 


b ALARMA

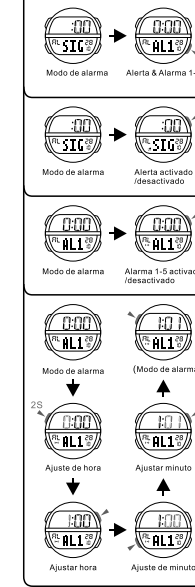 


c CRONÓMETRO

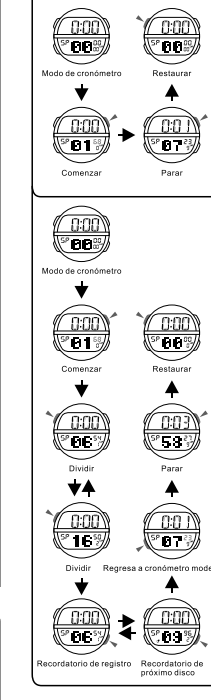 


SELEÇÃO DE MODO

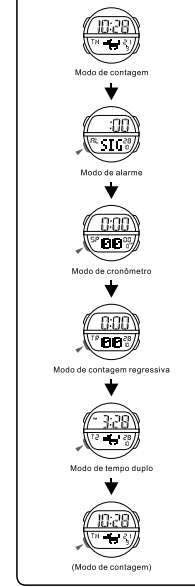 


b ALARME

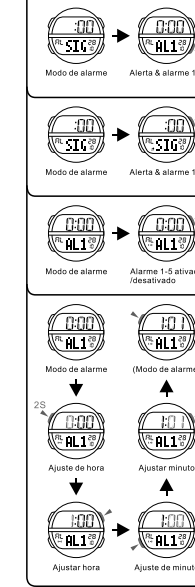 


c CRONÓMETRO

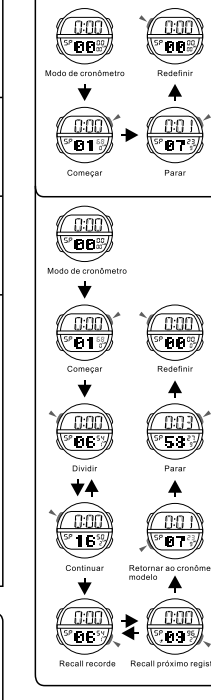 


d COUNTDOWN

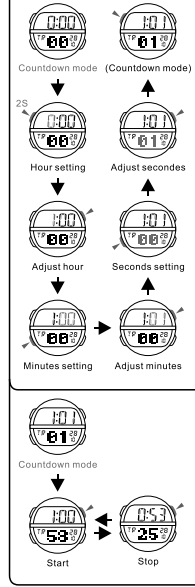 


e DUAL TIME

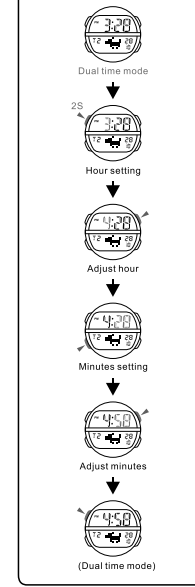 


CARTOON SELECTION

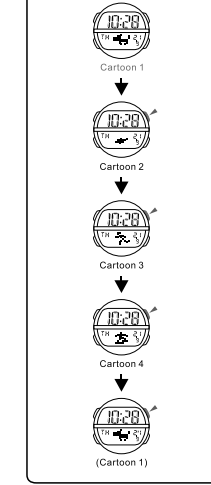 


d COUNTDOWN

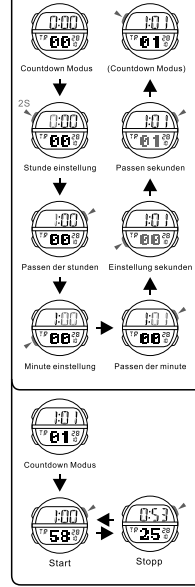 


e DUAL ZEIT

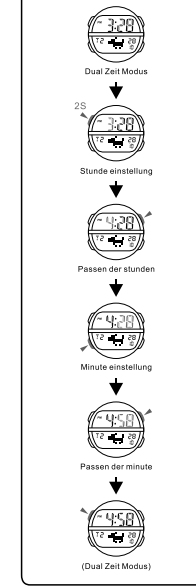 


d CONTEO REGRESIVO

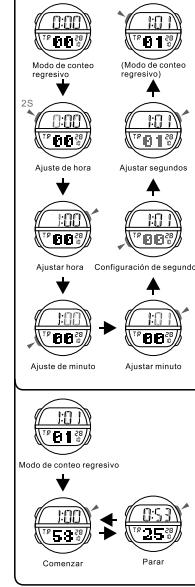 


e TIEMPO DOBLE

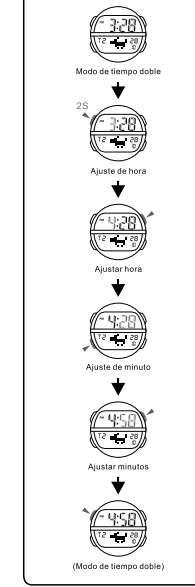 


SELECCIÓN DE CARTOON

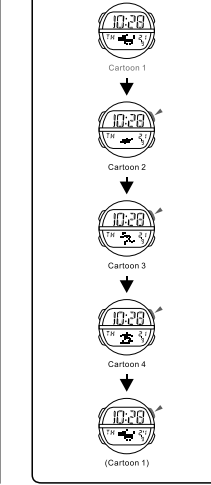 

d CONTAGEM REGRESSIVA

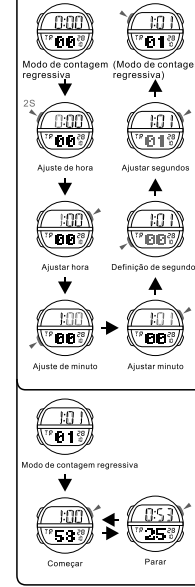 

e TEMPO DUPLo

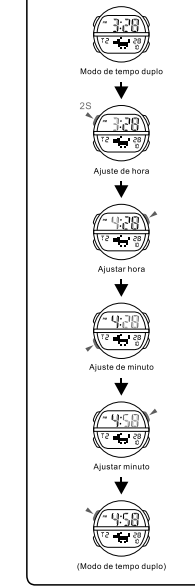 

SELEÇÃO DE CARTOON

