 





BUTTONS

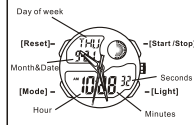


Battery: CR2025 +SR626SW

 
BACKLIGHT

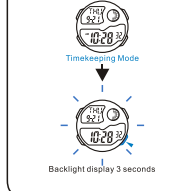


MODE SELECTION

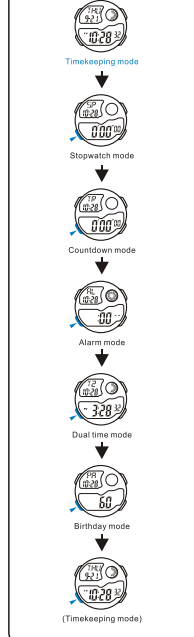 


a TIMEKEEPING

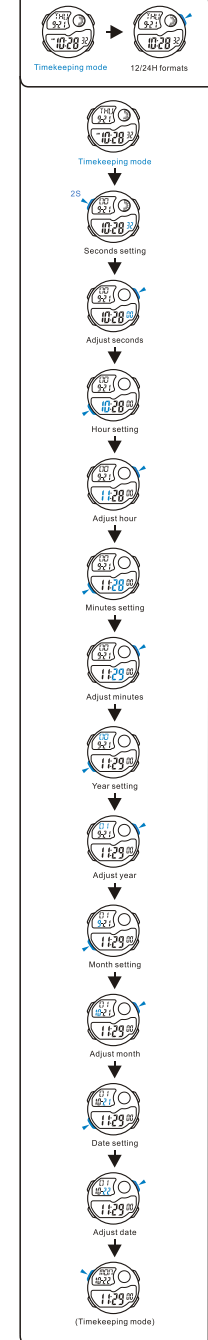 


b STOPWATCH

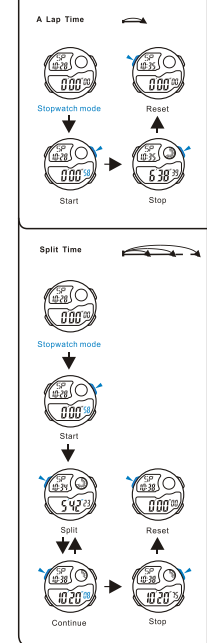 

c COUNTDOWN

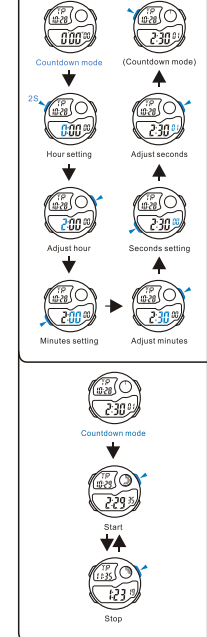 


TASTEN

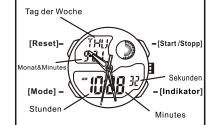 


Batterie: CR2025 +SR626SW

 
HINTERGRUNDBELEUCHTUNG

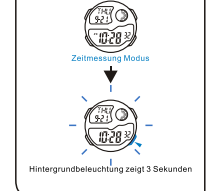


MODE AUSWAHL

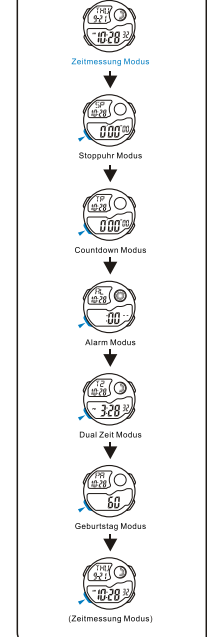 


a ZEITMESSUNG

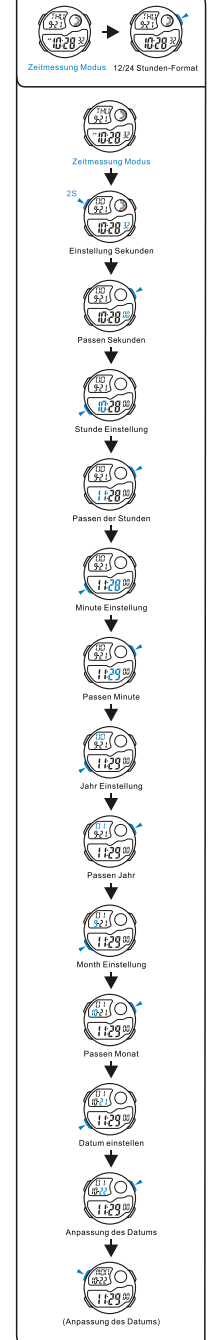 


b STOPUHR

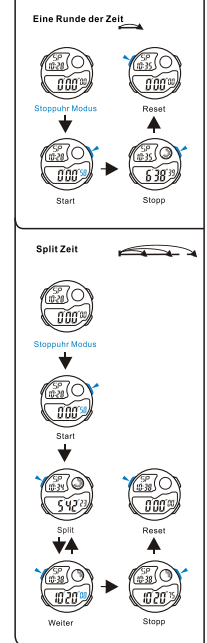 

c COUNTDOWN

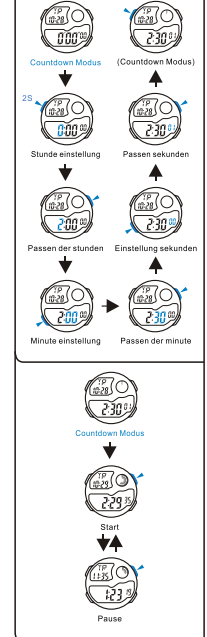 


BOTONES

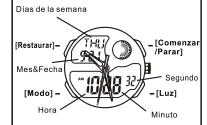 


Bateria: CR2025 +SR626SW

 
LUZ TRASERA

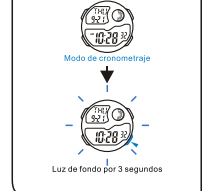


SELECCION DE MODO

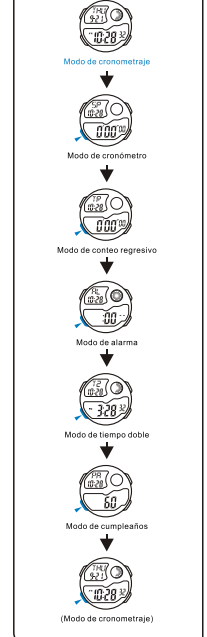 


a CRONOMETRAJE

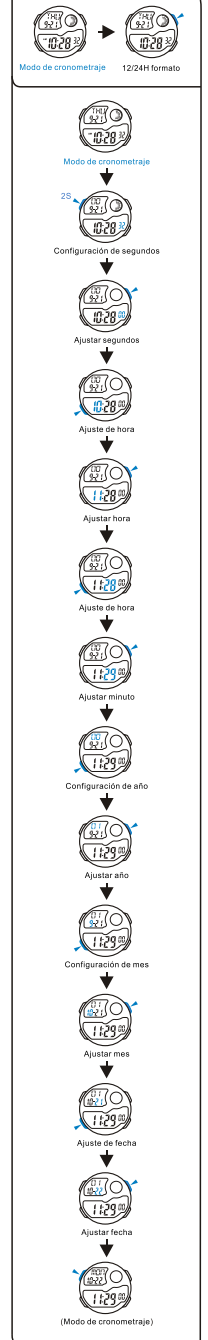 


b CRONOMETRO

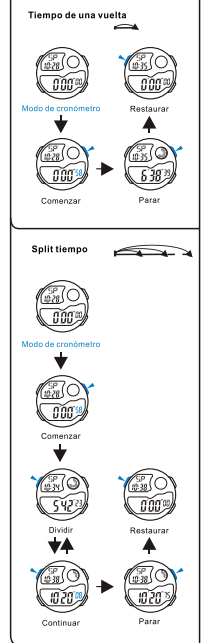 

c CONTEO REGRESIVO

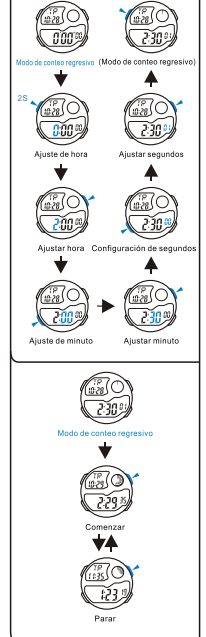 


BOTÕES

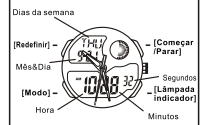 


Bateria: CR2025 +SR626SW

 
LUZ

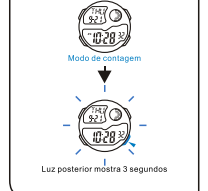


SELEÇÃO DE MODO

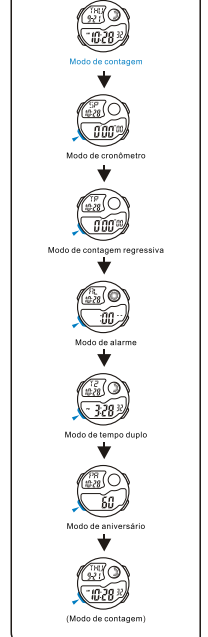 


a CONTAGEM

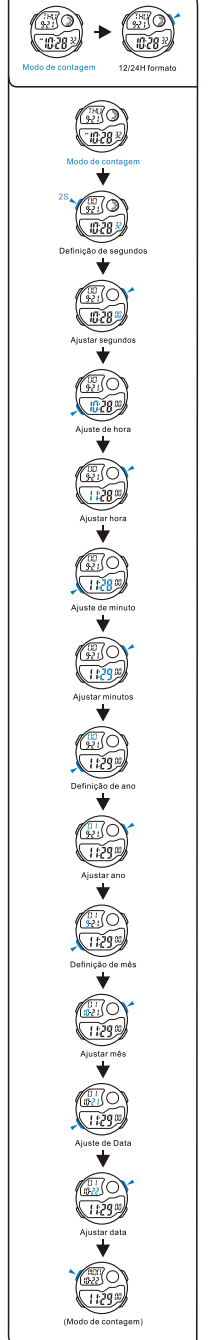 


b CRONOMETRO

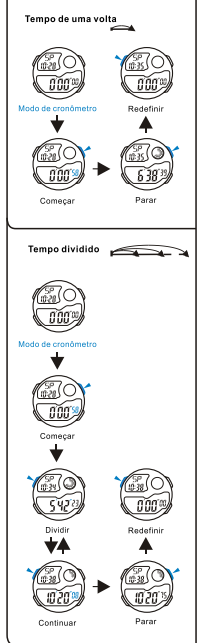 


c CONTAGEM REGRESSIVA

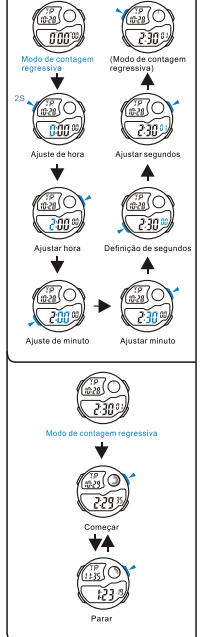 


d ALARM

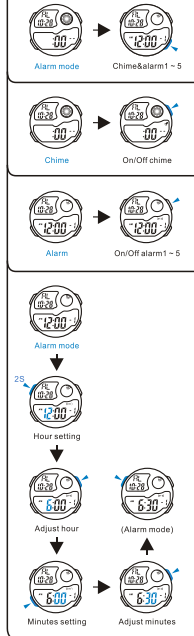 


e DUAL TIME

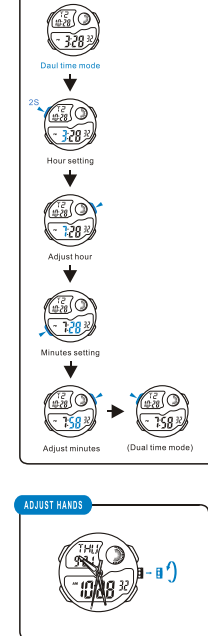 


f PACER

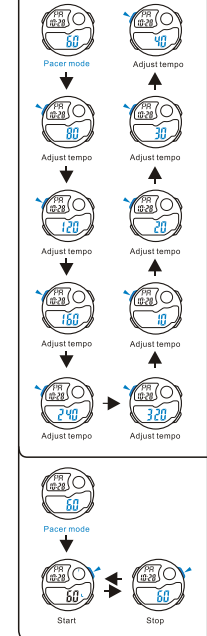 


d ALARM

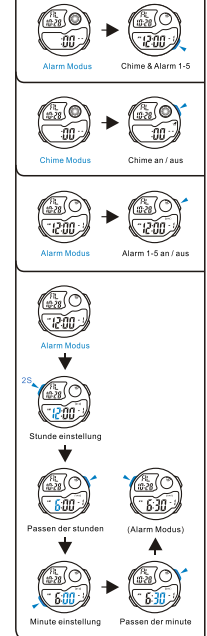 


e DUAL ZEIT

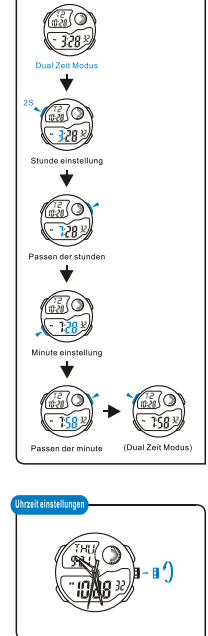 


f PACER

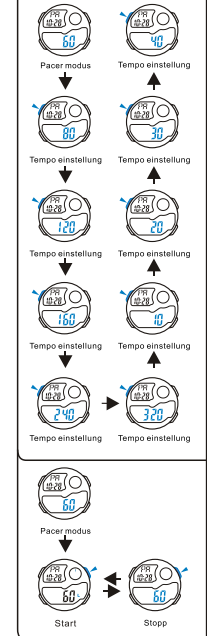 


d ALARMA

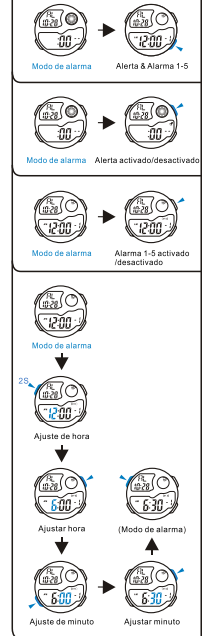 


e TIEMPO DOBLE

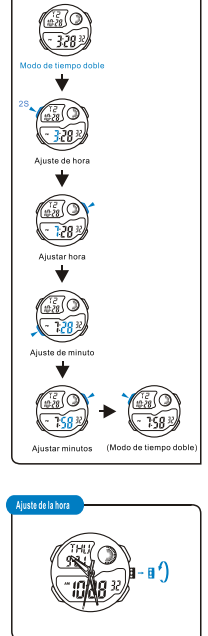 


f PACER

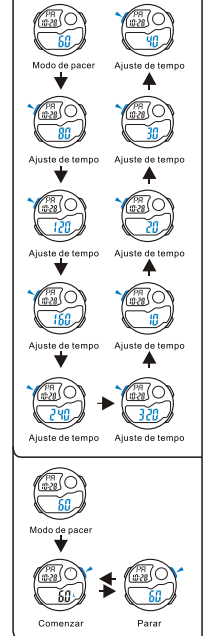 


d ALARME

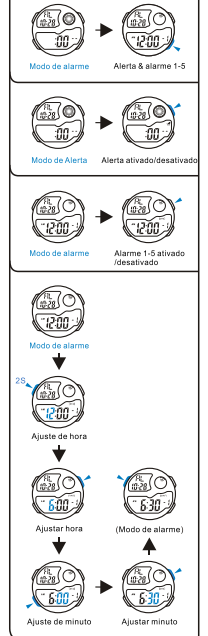 

e TEMPO DUPLIO

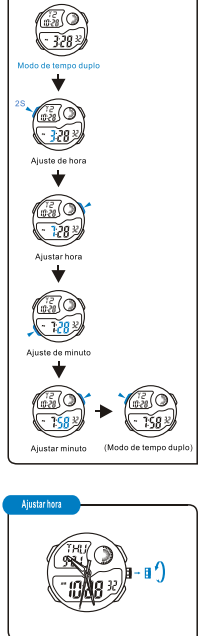 


f MARCAPASSO

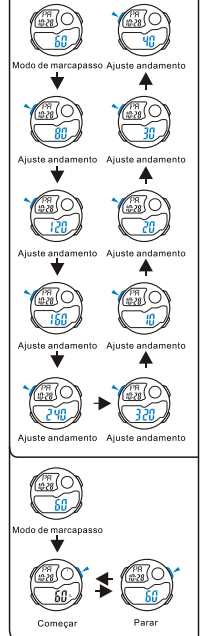 




### BOUONS

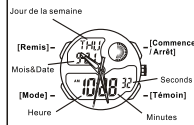 


Batterie: CR2025 +SR626SW


### LUMINEUX

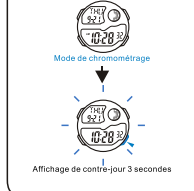 


### SELECTION MODE

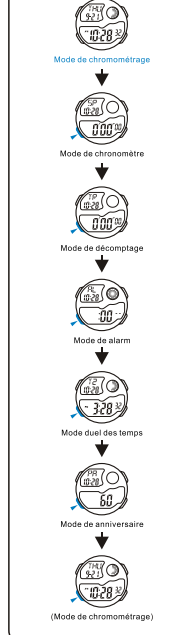 


### a CHRONOMETRAGE

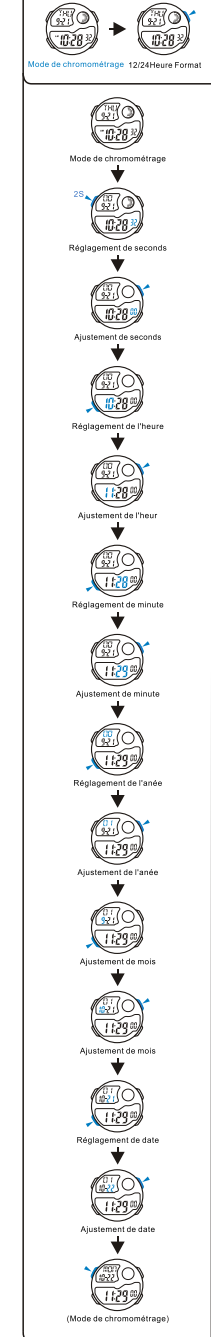 


### b CHRONOMETRE

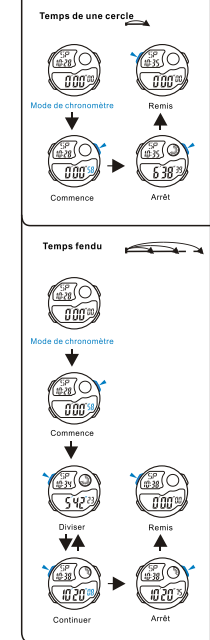 


### c DECOMPTAGE

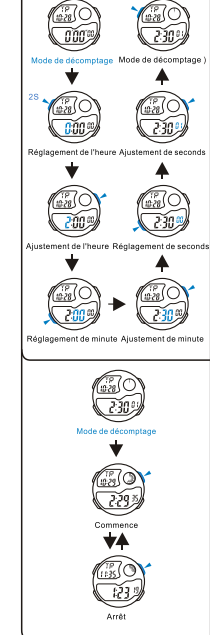 


### КНОПКИ

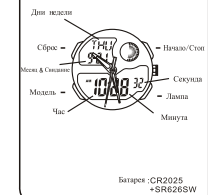 


### ПОДСВЕТ

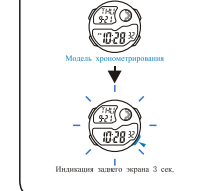 


### ВЫБОР МОДЕЛИ

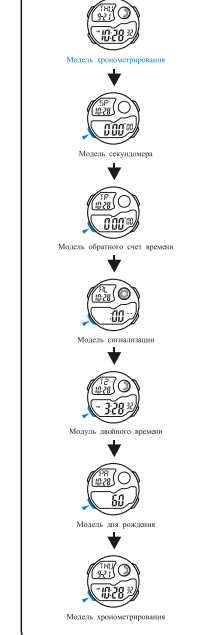 

### a ХРОНОМЕТРИРОВАНИЕ

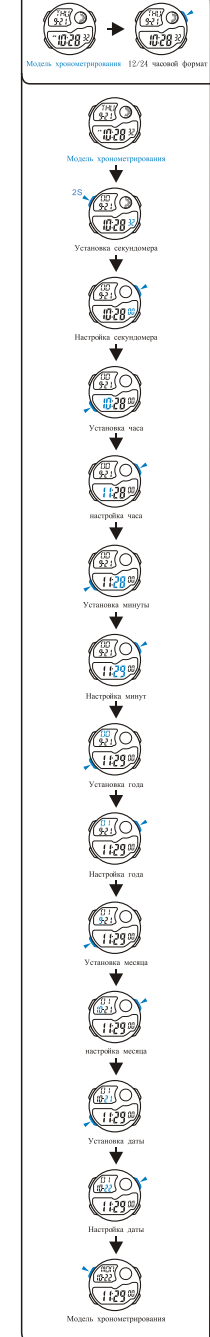 


### b СЕКУНДОМЕР

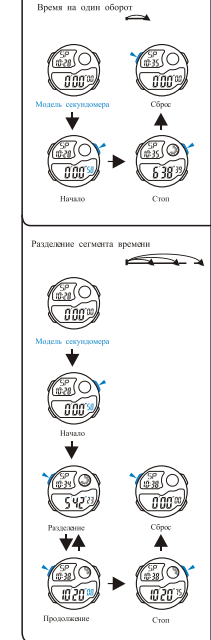 


### c ОБРАТНЫЙ СЧЕТ ВРЕМЕНИ



 
### TASTI

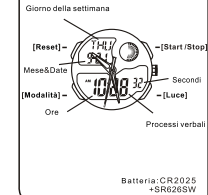


### Retroilluminazione

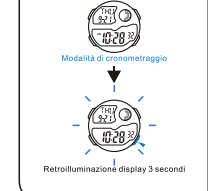 


### MODALITA DI SELEZIONE

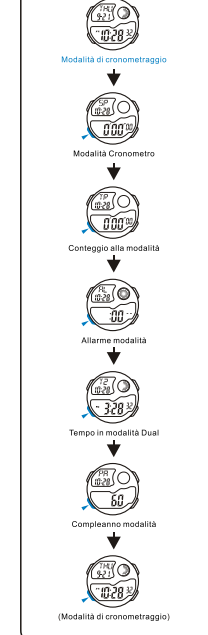 


### a Cronometraggio

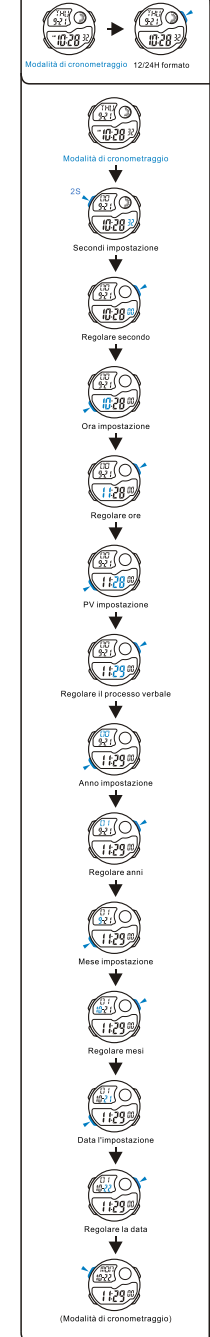 


### b CRONOMETRO

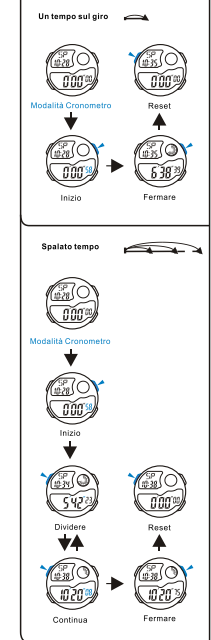 


### c COUNTDOWN

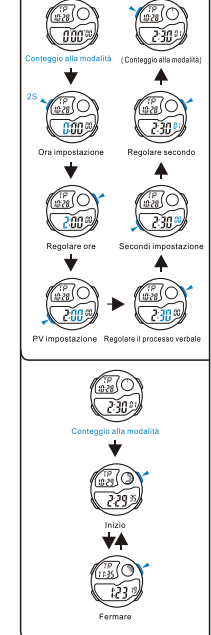 


### 按鍵功能

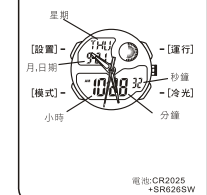 


### 冷光

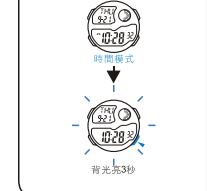 


### 模式選擇

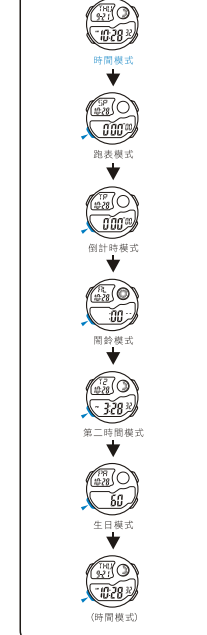 


### a 時間

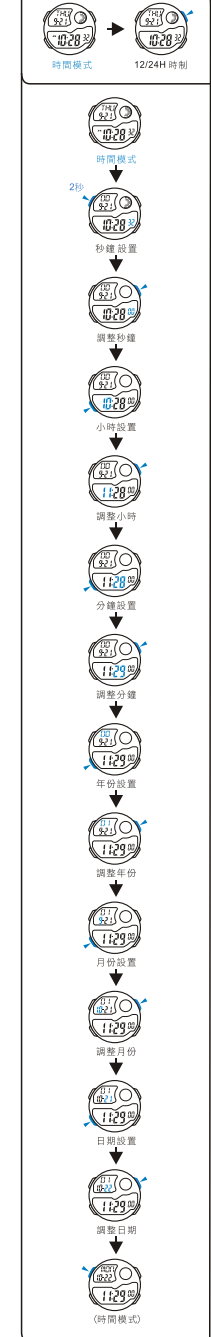 


### b 跑表

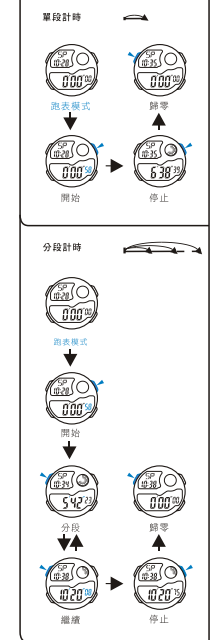 


### c 倒計時

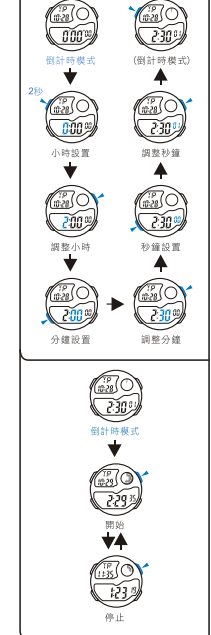 


### d ALARM

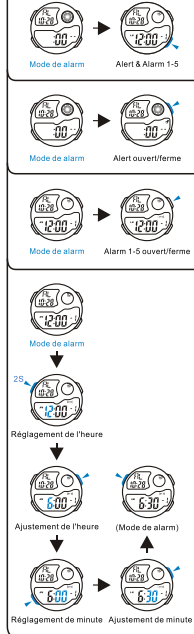 


### e DUEL DES TEMPS

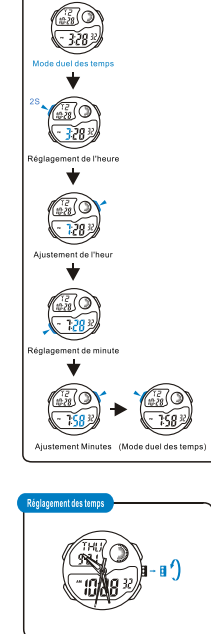 


### f PACER

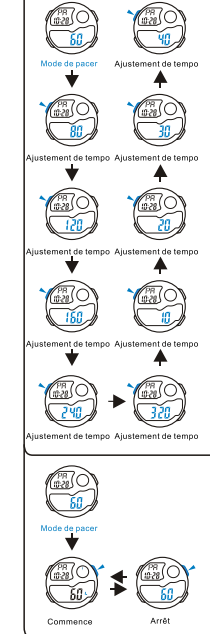 


### g СИГНАЛИЗАЦИЯ

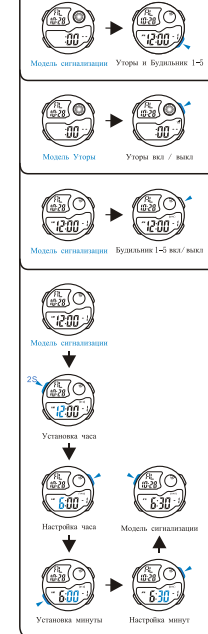 


### e ДВОЙНОЕ ВРЕМЯ

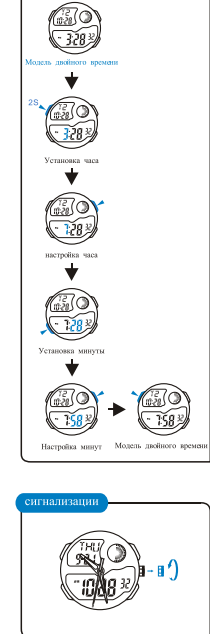 


### f ЛИНХОДЕЦ

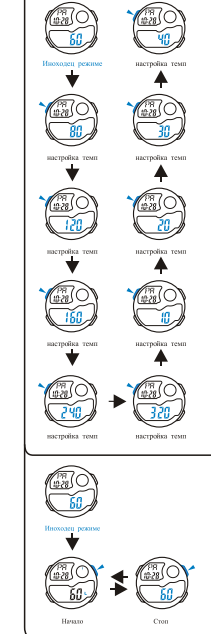 


### d ALLARME

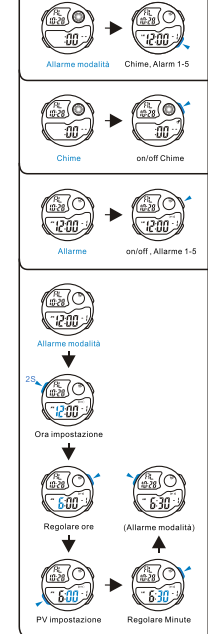 


### e DUALTIME

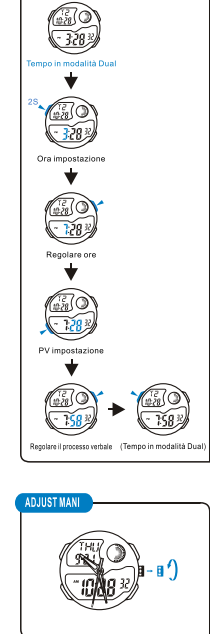 


### f PACER

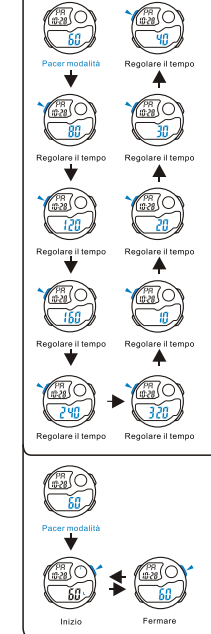 

### g 鬧鈴

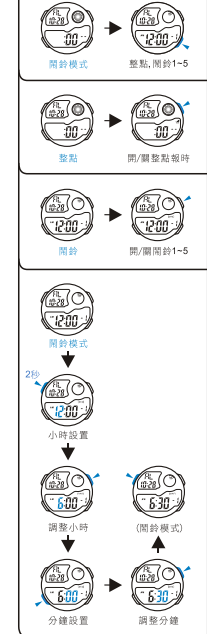 

### e 第二時間

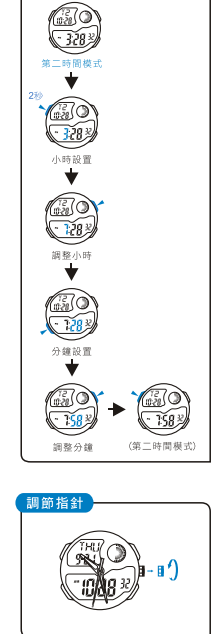 

### f 節拍器

