 
 





BUTTONS

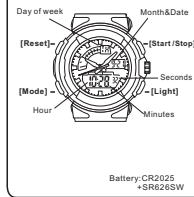


BACKLIGHT

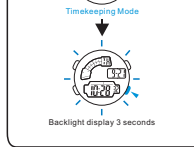

 
MODE SELECTION

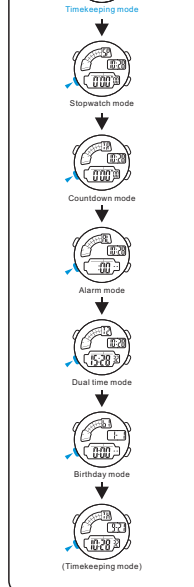


a TIMEKEEPING

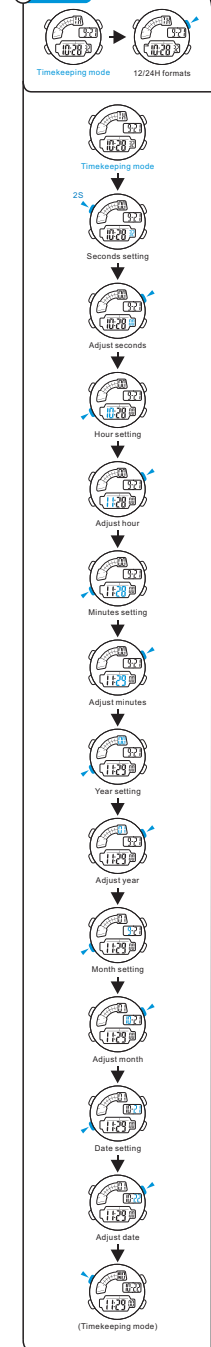 


b STOPWATCH

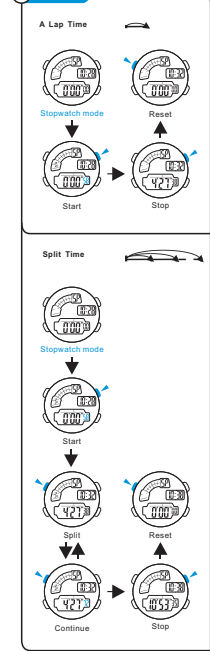 

c COUNTDOWN

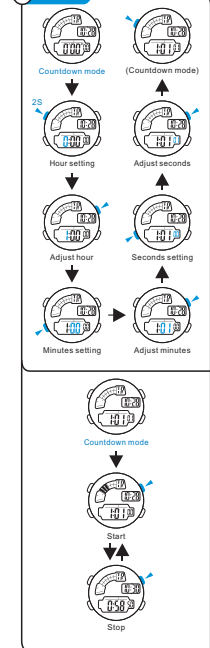 


TASTEN

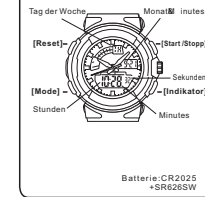 


HINTERGRUNDBELEUCHTUNG



 
MODE AUSWAHL

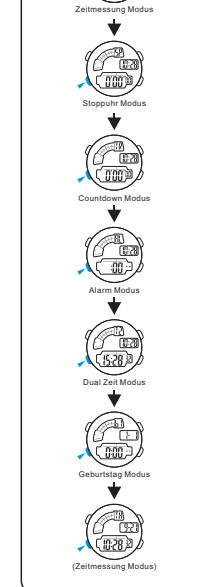


a ZEITMESSUNG

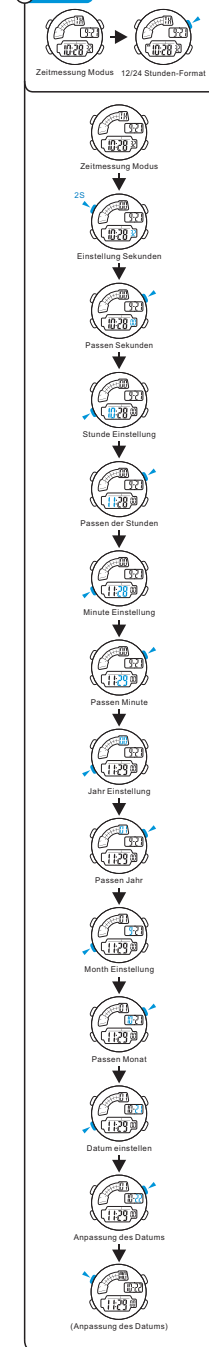 


b STOPUHR

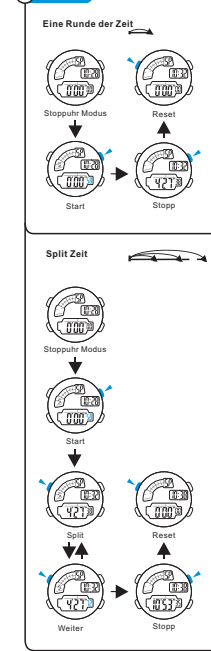 

c COUNTDOWN

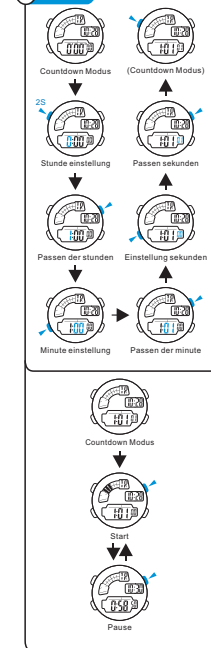 


BOTONES

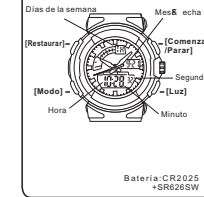 


LUZ TRASERA



 
SELECCIÓN DE MODO

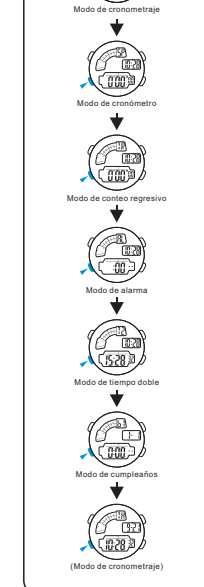


a CRONOMETRAJE

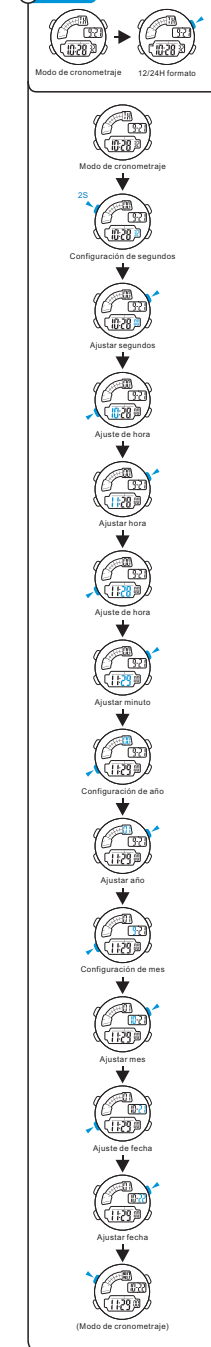 

b CRONÓMETRO

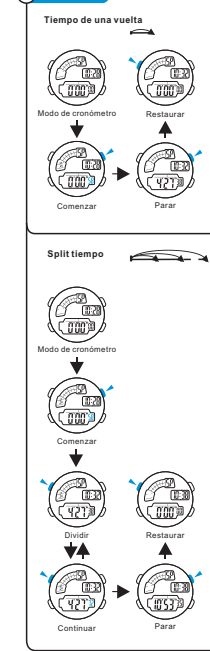 

c CONTEO REGRESIVO

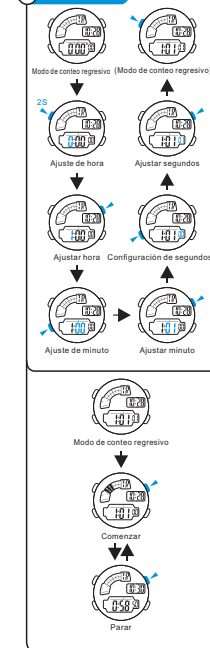 


BOTÕES




LUZ



 
SELEÇÃO DE MODO

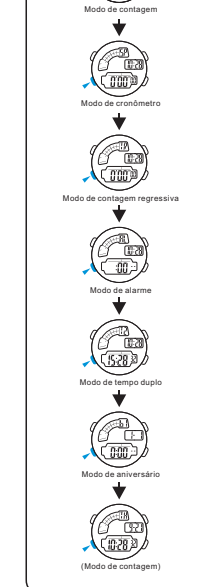


a CONTAGEM

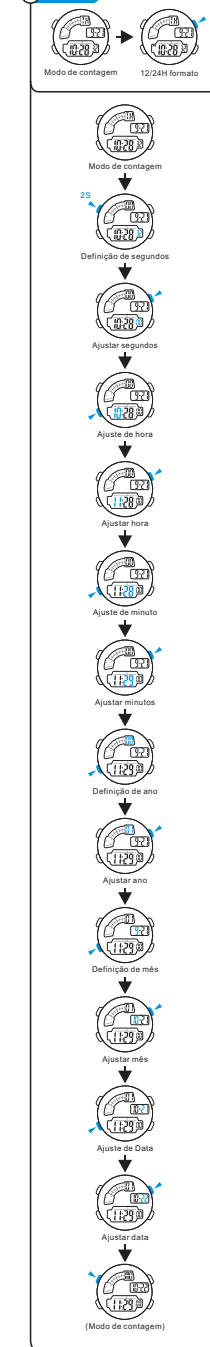 


b CRONÔMETRO

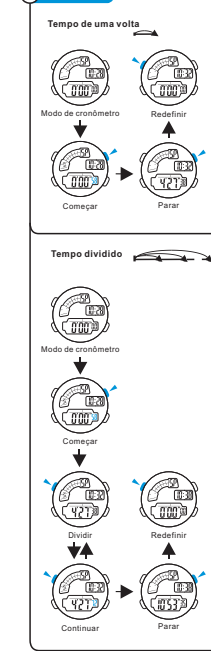 


c CONTAGEM REGRESSIVA

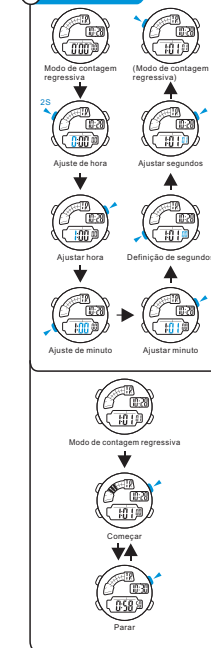 


d ALARM

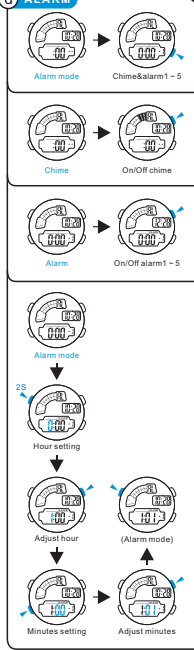 


e DUAL TIME

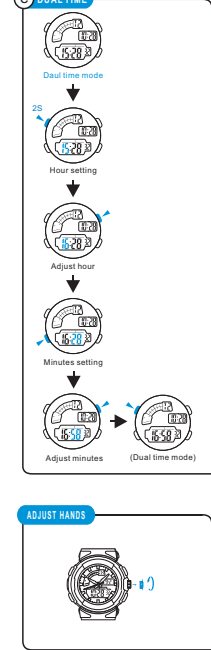 


f BIRTHDAY

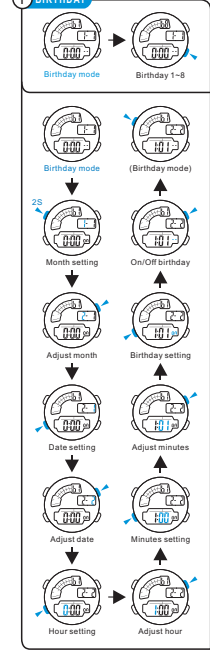 


d ALARM

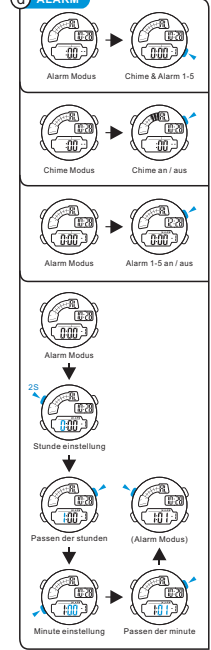 


e DUAL ZEIT

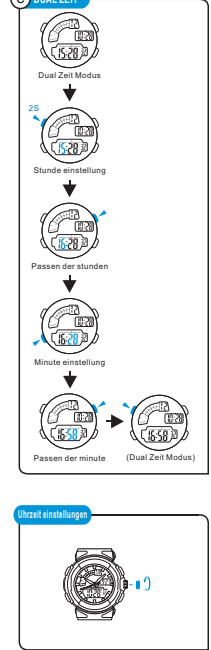 


f GEBURTSTAG

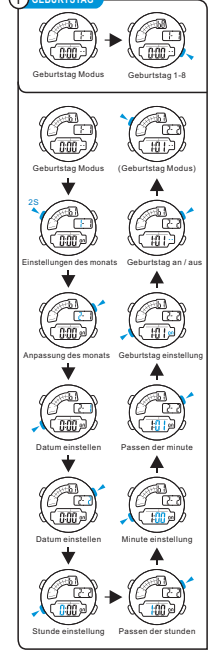 


d ALARMA

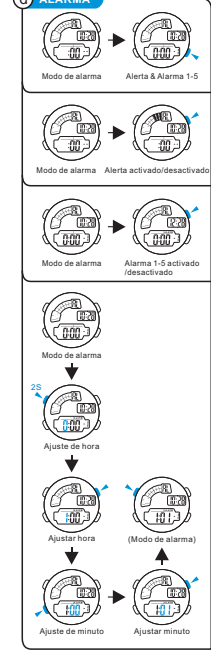 


e TIEMPO DOBLE

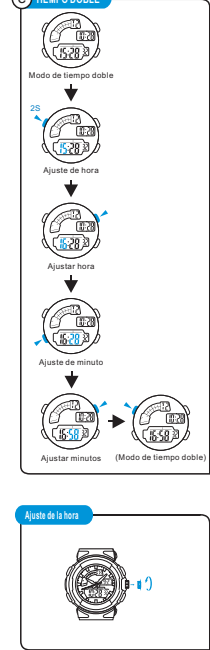 


f CUMPLEAÑOS

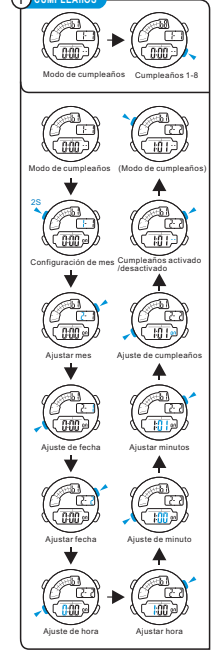 

d ALARME

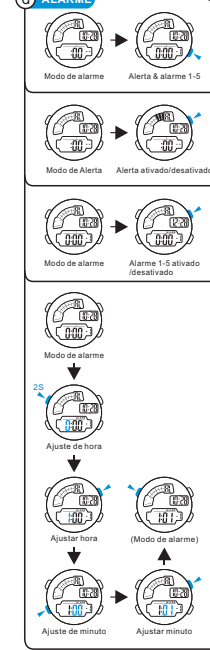 

e TIEMPO DUPL0

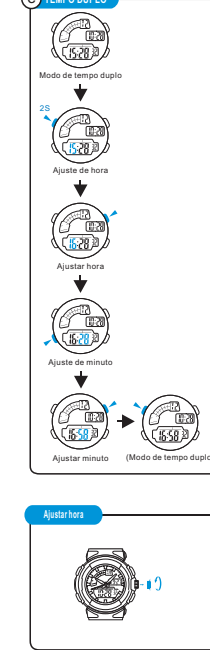 

f ANIVERSÁRIO

