



BUTTONS

Day of week Date
Hour Minutes Seconds

Battery: CR2025



TASTEN

Tag der Woche Datum
Stunden Minuten Sekunden

Batterie: CR2025



Botones

Días de la semana Fecha
Hora Minuto Segundo

Batería: CR2025



BOTÕES

Dias da semana
Hora Minutos Segundos Data

Bateria: CR2025

MODE SELECTION

MODE AUSWAHL

SELECCIÓN DE MODO

SELEÇÃO DE MODO

a TIMEKEEPING

12/24H format

Display: Year, Month, Date

a Zeitmessung

12/24H Stunden System Einstellungen

Jahr, Monat, Datum anzeigen

a Cronometraje

Configuración de 12/24H

Display año, mes, fecha

a Contagem

Definição de 12/24H

Exibir ano, mês, data

Time Setting

Time Setting

Configuración de tiempo

Dfinition de tempo

BACKLIGHT

Hintergrundbeleuchtung

LUZ TRASERA

LUZ DO FUNDO

b ALARM

Alarm & Chime On/Off

Alarm Time Setting

b Alarm

Alarm & Chime an / aus

Alarm Time Setting

b ALARMA

Alerta activado/desactivado

Modo de alarma

b ALARME

Alerta ativado/desativado

Alarme ativado/desativado

c STOPWATCH

A Lap Time

Split Time

c Stoppuhr

Eine Runde der Zeit

Split Zeit

c Cronómetro

Tiempo de una vuelta

Split Time

c CRONÔMETRO

Tempo de uma volta

Tempo dividido

d DUAL TIME

d Dual Zeit

d TIEMPO DOBLE

d TEMPO DUPLIO

