 
 


MODESELECTION

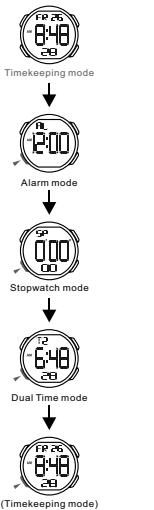

a TIMEKEEPING

BUTTONS

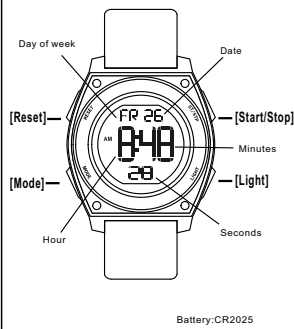

 
Battery: CR2025

b ALARM

Alarm & Chime On/Off




Alarm Time Setting

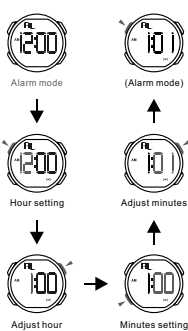


c STOPWATCH

 
A Lap Time

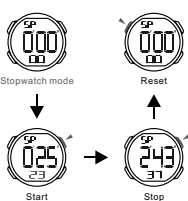


Split Time

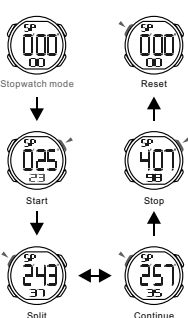 


d DUAL TIME

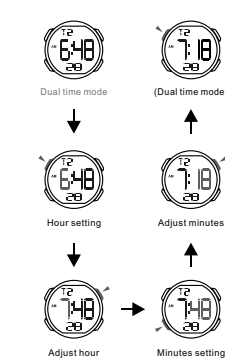 




BACKLIGHT

 


MODE AUSWAHL

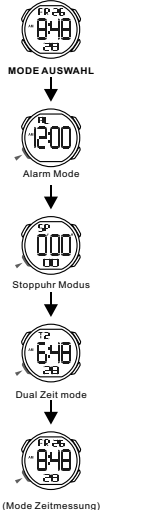 


Zeitmessung

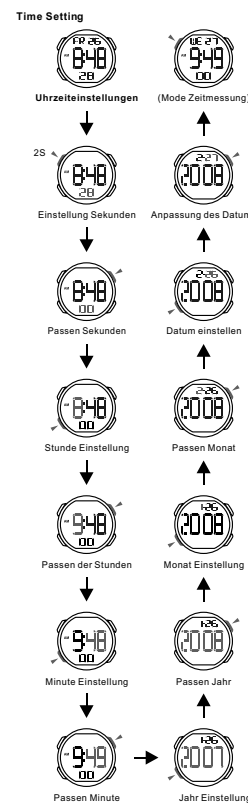   

Hintergrundbeleuchtung

 


TASTEN

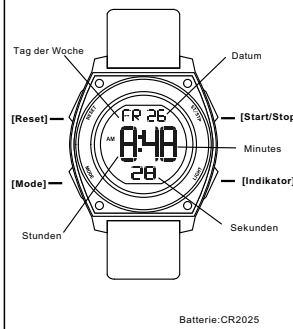 


Batterie: CR2025


 
b Alarm




Alarm Time Setting

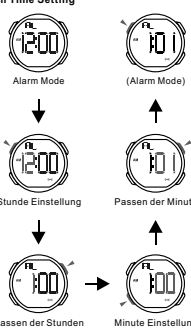 


c Stoppuhr

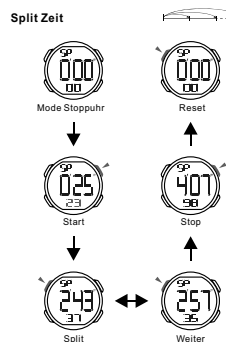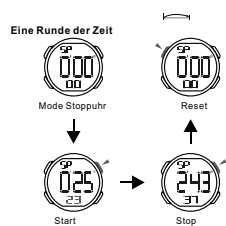  



d Dual Zeit

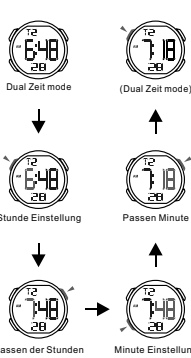 


SELECCIÓN DE MODE

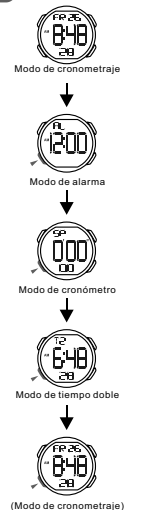 


a Cronometraje

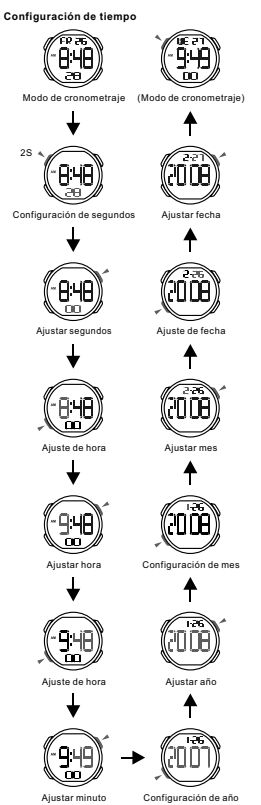  

LUZ TRASERA

 


Botones


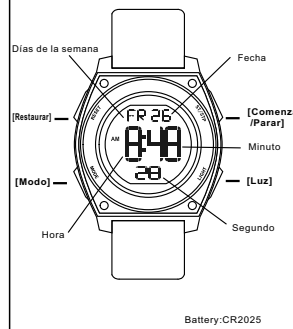 


Battery: CR2025

 
b ALARMA

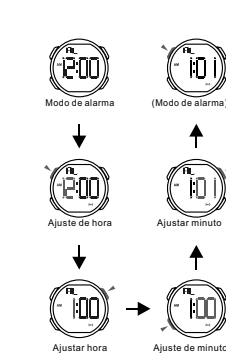


c Cronómetro

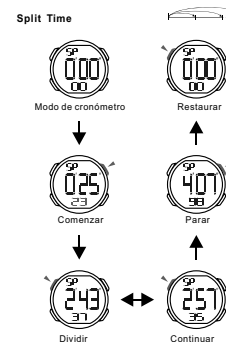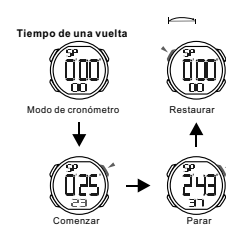  




d TIEMPO DOBLE

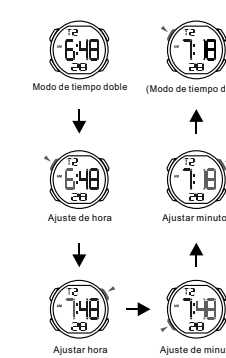 


SELEÇÃO DE MODE

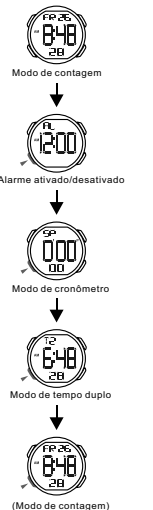 


a Contagem

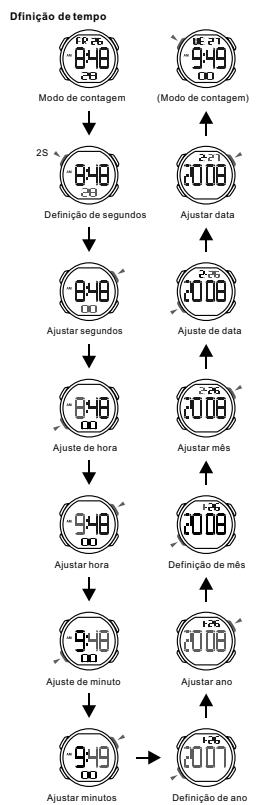   

LUZ DO FUNDO


 


BOTÕES


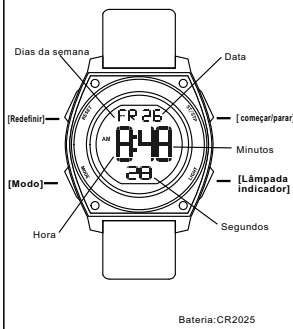 


Bateria: CR2025

  b ALARME

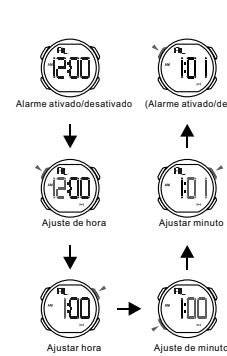

c CRONÔMETRO

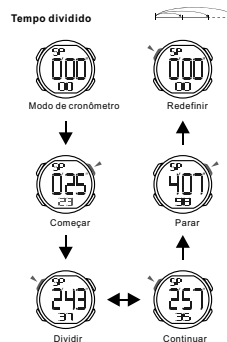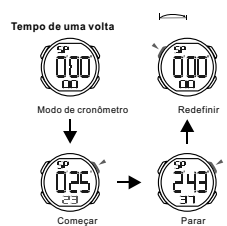  

d TEMPO DUPLA

